



## testo 300/testo 300 LL NEXT LEVEL – flue gas analyzer

Instruction manual






Register your Testo product at [www.testo.com/register](http://www.testo.com/register) and receive a one-year free warranty extension.




Product registration is permitted up to 30 days after purchase.

For product registration terms and conditions and participating countries, please go to [www.testo.com/register](http://www.testo.com/register)

# Contents

<b>1</b>	<b>About this document</b> .....	<b>7</b>
1.1	Symbols .....	7
1.2	Warning notices.....	7
<b>2</b>	<b>General safety instructions</b> .....	<b>8</b>
<b>3</b>	<b>Product-specific safety instructions</b> .....	<b>10</b>
<b>4</b>	<b>Disposal</b> .....	<b>11</b>
<b>5</b>	<b>Products with wireless technology</b> .....	<b>12</b>
<b>6</b>	<b>Storage</b> .....	<b>12</b>
<b>7</b>	<b>Authorisations and certification</b> .....	<b>12</b>
<b>8</b>	<b>EU declaration of conformity</b> .....	<b>12</b>
<b>9</b>	<b>Specifications</b> .....	<b>13</b>
<b>10</b>	<b>Product description</b> .....	<b>15</b>
10.1	Front view.....	15
10.2	Rear view .....	16
10.3	Connections .....	17
<b>11</b>	<b>Compact flue gas probe</b> .....	<b>18</b>
11.1	Modular flue gas probe.....	18
<b>12</b>	<b>First steps</b> .....	<b>20</b>
12.1	Commissioning.....	20
12.2	Mains unit/energy storage unit .....	20
12.2.1.1	Charge energy storage unit.....	20
12.2.1.2	Mains operation.....	21
12.3	Touchscreen operating concept .....	21
12.4	Keypad .....	22
12.5	Switching the instrument on and off .....	23
12.6	Connect probes .....	24
12.7	Connecting Smart Probes and testo Smart App.....	25
12.7.1	Attaching the testo Bluetooth® Connector (0554 3004).....	25
12.7.2	Smart Probes compatible with the instrument .....	27
12.7.3	Establishing a connection with the testo Smart App.....	27
12.7.3.1	App user interface .....	28
12.7.3.2	Measurement menu – testo 300 Second Screen .....	28
12.7.4	Connecting for the first time .....	29
12.7.5	Carrying out the measurement.....	30
12.7.6	Settings – language.....	30
12.7.7	Help and Information .....	31
12.7.7.1	Instrument information.....	31
12.7.7.2	Tutorial .....	31

12.7.7.3 Exclusion of liability.....	31
<b>13 Using the product.....</b>	<b>33</b>
13.1 User interface .....	33
13.1.1 List reading display type .....	34
13.1.2 Graphics reading display type.....	35
13.1.3 Corestream reading display type .....	36
13.2 Overview of main menu (  ).....	37
13.2.1.1 Customer / Measuring site.....	39
13.2.2 Protocols.....	41
13.2.3 Saved reports .....	43
13.2.4 Second Screen .....	45
13.2.5 Gas path check.....	45
13.2.6 Device settings .....	45
13.2.6.1 Country version and language .....	45
13.2.6.2 Wireless LAN .....	47
13.2.6.3 Date/Time .....	48
13.2.6.4 Own company address .....	50
13.2.6.5 Hotspot .....	50
13.2.6.6 Rechargeable battery management.....	51
13.2.6.7 Display brightness .....	51
13.2.6.8 Manage e-mail accounts.....	51
13.2.6.9 CO/NO sensor protect .....	51
13.2.6.10 NO2 addition .....	52
13.2.6.11 O <sub>2</sub> reference .....	52
13.2.6.12 Alarm limits.....	53
13.2.7 Sensor diagnosis .....	53
13.2.8 Error list .....	53
13.2.9 Device information .....	53
13.2.10 Server information .....	53
13.2.11 E-mail .....	53
13.2.12 My Apps.....	55
13.2.13 Help .....	56
13.2.13.1 Device registration.....	56
13.2.13.2 Tutorial .....	56
13.2.13.3 Setup Wizard.....	56
13.2.13.4 Wireless firmware update.....	57
13.2.13.5 Update via USB.....	59

<b>14</b>	<b>Performing the measurement.....</b>	<b>61</b>
14.1	Prepare for measurement .....	61
14.1.1	Zeroing phases.....	61
14.1.2	Carry out gas path check .....	62
14.1.3	Use of flue gas probe .....	62
14.2	Overview of measurement types (  ).....	63
14.2.1	Flue gas .....	64
14.2.2	Draught .....	68
14.2.3	1st BImSchV .....	69
14.2.4	44th BImSchV .....	71
14.2.5	Solid fuel measurement.....	74
14.2.6	CO undiluted .....	75
14.2.7	Smoke number.....	76
14.2.8	Differential pressure .....	76
14.2.9	Differential temp. ....	77
14.2.10	O <sub>2</sub> supply air.....	79
14.2.11	Gas flow .....	80
14.2.12	Oil flow rate .....	80
14.2.13	CO ambient.....	81
14.2.14	Tightness test 1.....	81
14.2.15	Serviceability .....	83
14.2.16	Let by test.....	84
14.2.17	4 Pa measurement.....	85
14.3	Overview of options (  ).....	89
14.3.1.1	Edit view.....	89
14.3.2	Zeroing Gas Sensors .....	91
14.3.3	Mean value calculation.....	92
14.4	Overview of protocols (  ).....	93
14.4.1	Print data.....	94
14.4.2	Save.....	94
14.4.3	Finish protocol.....	95
<b>15</b>	<b>Maintenance.....</b>	<b>98</b>
15.1	Service .....	98
15.2	Calibration.....	98
15.3	Check instrument status.....	98
15.3.1	Sensor diagnosis.....	98

## Contents


---

15.3.2	Error list .....	98
15.4	Clean the measuring instrument.....	98
15.5	Drain condensate container .....	99
15.6	Open the measuring instrument.....	100
15.7	Replace sensors .....	102
15.8	Replace O2 sensor .....	102
15.8.1	Change CO, CO H2 and NO sensor.....	104
15.9	Clean modular flue gas probe.....	105
15.10	Replace the probe module.....	105
15.11	Check/replace particle filter .....	106
15.12	Replace thermocouple .....	107
<b>16</b>	<b>Technical data.....</b>	<b>108</b>
16.1	Contact and support .....	111

# 1 About this document

- The instruction manual is an integral part of the instrument.
- Keep this documentation to hand so that you can refer to it when necessary.
- Please read this instruction manual through carefully and familiarize yourself with the product before putting it to use.
- Hand this instruction manual on to any subsequent users of the product.
- Pay particular attention to the safety instructions and warning advice in order to prevent injury and damage to the product.

## 1.1 Symbols

Display	Explanation
	Note: basic or further information
1 2 ...	Action: several steps, the sequence must be followed.
›	Result of an action
✓	Requirement

## 1.2 Warning notices

Always pay attention to any information marked with the following warning notices along with warning pictograms. Implement the specified precautionary measures!

 **DANGER**

Risk of death!

 **WARNING**

Indicates possible serious injury.

 **CAUTION**

Indicates possible minor injury.

**CAUTION**

Indicates possible damage to equipment.

# 2 General safety instructions

- Only operate the product properly, for its intended purpose, and within the parameters specified in the technical data.
- Do not apply any force.
- Do not operate the product if there are signs of damage on the housing, mains unit or connected cables.
- Only use the product in closed, dry rooms and protect it from rain and moisture.
- The product must be checked for any visible damage before commissioning.
- Dangers may also arise from objects to be measured or the measuring environment. Always comply with the locally valid safety regulations when carrying out measurements.
- Only perform maintenance and repair work on this instrument that is described in this documentation. Follow the prescribed steps exactly when doing the work.
- Any additional work must only be carried out by authorized, qualified personnel. Otherwise, Testo will refuse to accept responsibility for the proper functioning of the product after repair and for the validity of approvals.
- Maintenance work that is not described in this documentation must only be carried out by trained service engineers.
- Safety instructions for patients with an implanted cardiac pacemaker when using Testo products with magnets
  - Handle instruments or accessories containing a magnet with care and keep them in a safe place.
  - Maintain a distance of 20 cm between your implant and the magnet which is incorporated into the instrument or accessories.
- Keep a safe distance from products which could be damaged by the effects of magnetism (e.g. monitors, computers, pacemakers or credit cards).
- Use only original spare parts from Testo.
- Temperature information given on probes/sensors relates only to the measuring range of the sensor technology. Do not expose handles and supply lines to temperatures above 45°C (113°F), unless they are explicitly approved for higher temperatures.



**⚠ WARNING**

**Risk of burns due to hot probes, probe shafts and sensor tips!**

▶ Do not get hold of hot parts (> 45°C/113°F) with bare hands immediately after a measurement.

- In the event of burns, immediately cool the relevant spot with cold water and consult a doctor if necessary.

Allow probes, probe shafts and sensor tips to cool down.

---

- The product must not be used in potentially explosive atmospheres, if it is not explicitly approved for these areas.
- Do not carry out any contact measurements on uninsulated, live parts.
- Do not expose the product to any extremely high or low temperatures. Avoid temperatures below -5°C or above 45°C. The exception is when a product has been explicitly approved for other temperatures.
- Protect the product from dust and dirt. Make sure that it is not exposed to an environment with dust, dirt, sand, etc.
- Prevent the product from falling.
- If operator safety can no longer be guaranteed, the product is to be taken out of service and secured against inadvertent use. This is the case if the product:
  - is obviously damaged
  - has fractures on the housing
  - has faulty measuring cables
  - has leaking batteries
  - no longer performs the required measurements
  - has been stored for too long in unfavourable conditions
  - has been exposed to mechanical stresses in transit

## 3 Product-specific safety instructions

### DANGER

#### **Integrated magnet**

#### **Danger to life for persons with pacemakers!**

- Keep a distance of at least 20 cm between your pacemaker and the measuring instrument.
- 

### ATTENTION

#### **Integrated magnet**

#### **Damage to other devices!**

- Keep a safe distance from devices that may be damaged by magnetism (e.g. monitors, computers, credit cards, memory cards, etc.).
- 

### CAUTION

#### **The condensate may be acidic.**

#### **Risk of burns to the hands!**

- Wear acid-resistant safety gloves, glasses and overalls to empty the condensate.
- 
- Make sure that the condensate has been fully emptied out of the condensate trap before the measuring instrument is stored for a long time.
  - Before disposing of the product, the condensate trap must be emptied and the condensate in the crude gas tube disposed of in a suitable container.
  - When testing a gas pipe, pay attention to the following:

### WARNING

Dangerous mixture of gases

#### **Danger of explosion!**

- Make sure there are no leaks between the sampling point and the measuring instrument.
  - Do not smoke or use naked flames during the measurement.
-

**⚠ CAUTION**

**Acid in the sensors.  
May cause chemical burns.**

- Do not open the sensors.  
Eye contact: Rinse the affected eye thoroughly under running water for 10 minutes, keeping the eyelids wide open and protecting the unaffected eye. Remove contact lenses wherever possible.

**⚠ CAUTION**

**Powder in the sensor filters.  
May cause irritation to the skin, eyes or respiratory tract.**

- Do not open the sensor filters.  
Eye contact: Rinse the affected eye thoroughly under running water for 10 minutes, keeping the eyelids wide open and protecting the unaffected eye. Remove contact lenses wherever possible.  
Skin contact: Remove the injured person's contaminated clothing, ensuring self-protection. Rinse affected skin areas under running water for at least 10 minutes.  
Inhalation: Move to fresh air and make sure that breathing is unrestricted.  
Ingestion: Rinse mouth out and spit out liquid. If conscious, drink 1 glass of water (approx. 200 ml). Do not induce vomiting.

## 4 Disposal

- Dispose of faulty energy storage units in accordance with the valid legal specifications.
- At the end of its useful life, deliver the product to the separate collection point for electric and electronic devices (observe local regulations) or return the product to Testo for disposal.



-  WEEE Reg. no. DE 75334352

## 5 Products with wireless technology

Changes or modifications that have been made without the explicit consent of the competent approval authority may lead to cancellation of the type approval.

Data transfer may be disturbed by equipment that uses the same ISM band.

Places where the use of radio communication links is not permitted include aeroplanes and hospitals. For this reason, the following points must be ensured before entering:

- Switch the instrument off.
- Disconnect the instrument from any external power sources (mains cable, external energy storage units, etc.).

## 6 Storage

- Keep the product away from any liquids and do not put it into water. Protect it from rain and humidity.
- Do not store the product together with solvents.

## 7 Authorisations and certification

Please find the current country approvals in the attached document.

Please note the following country-specific information for the product authorization.



The use of the wireless module is subject to the regulations and stipulations of the respective country of use and the module may only be used in countries for which a national certification has been granted. The user and every owner has the obligation to adhere to these regulations and prerequisites for use and acknowledges that the re-sale, export, import, etc., in particular in, to or from countries without wireless authorization, is their responsibility.

---

## 8 EU declaration of conformity

You can find the EU declaration of conformity on the Testo website, [www.testo.com](http://www.testo.com), under the product-specific downloads.

## 9 Specifications

The testo 300 NEXT LEVEL is a measuring instrument which enables the professional flue gas analysis of combustion systems, such as

- small combustion plants (oil, gas, wood, coal)
- low-temperature and condensing boilers
- gas heaters.

Using the instrument, these systems can be adjusted and checked for compliance with the applicable limit values.

The instrument has been verified as a short-term measuring instrument and should not be used as a safety (alarm) device. It is intended for indoor use only.

The following tasks can also be carried out using the instrument:

- Regulating the O<sub>2</sub>, CO and CO<sub>2</sub>, NO, NO<sub>x</sub> values in combustion plants to ensure optimum operation.
- Draught measurement.
- 4Pa measurement.
- Measuring and regulating the gas flow pressure in gas heaters.
- Measuring and optimising the flow and return temperatures of heating systems.
- Measuring the CO concentration in the ambient air.
- The instrument can be used for measurements on CHP plants in accordance with the first German Federal Immission Control Ordinance (BImSchV).
- In principle, the CO sensor can also be used for measurements on CHP plants. If you carry out more than 50 measurements on CHP plants per year, please contact your nearest Testo service centre or send the instrument to Testo Service for checking.

An NO<sub>x</sub> filter for the CO sensor can be ordered as a spare part to replace a used filter.

The testo 300 NEXT LEVEL is a measuring instrument which enables the professional flue gas analysis of combustion systems, such as

- small combustion plants (oil, gas, wood, coal)



The solid fuel measurement adapter (0600 9765) is required for measurements on solid fuel systems. The adapter protects the measuring instrument from harmful substances (dust, organic compounds, etc.).

---

- low-temperature and condensing boilers
- gas heaters.

Using the instrument, these systems can be adjusted and checked for compliance with the applicable limit values.

The instrument has been verified as a short-term measuring instrument and should not be used as a safety (alarm) device.

The following tasks can also be carried out using the instrument:

- Regulating the O<sub>2</sub>, CO and CO<sub>2</sub>, NO, NO<sub>x</sub> values in combustion plants to ensure optimum operation.
- Draught measurement.
- 4Pa measurement.
- Measuring and regulating the gas flow pressure in gas heaters.
- Measuring and optimising the flow and return temperatures of heating systems.
- Measuring the CO concentration in the ambient air.
- The instrument can be used for measurements on CHP plants in accordance with the first German Federal Immission Control Ordinance (BImSchV).
- In principle, the CO sensor can also be used for measurements on CHP plants. If you carry out more than 50 measurements on CHP plants per year, please contact your nearest Testo service centre or send the instrument to Testo Service for checking.

An NO<sub>x</sub> filter for the CO sensor can be ordered as a spare part to replace a used filter.

# 10 Product description

## 10.1 Front view







1	USB interface/ mains connection	4	User interface
2	Gas outlet	5	Condensate container
3	On/Off button	6	Connections

## 10.2 Rear view



1 Attachment point for carrying strap	2 Magnets
---------------------------------------	-----------

### Explanation of icons

IMPORTANT	
	<p><b>Magnetic field</b>  <b>Damage to other devices!</b></p> <ul style="list-style-type: none"> <li>- Keep a safe distance away from products that could be damaged by the effects of magnetism (e.g. monitors, computers or credit cards).</li> </ul>
	<p>At the end of its useful life, deliver the product to the separate collection point for electric and electronic devices (observe local regulations) or return the product to Testo for disposal.</p>
	<p>testo 300 NEXT LEVEL complies with the Korean safety standard.</p>
	<p>testo 300 NEXT LEVEL is Bluetooth-enabled</p>





China RoHS

## 10.3 Connections



**1** Probe connections for additional probes and testo Bluetooth® Connector

**3** Flue gas socket

**2** Integrated ambient air probe

**4** Differential pressure measurement connection



There must be no more than one extension lead (0554 1201) connected between flue gas socket and flue gas probe.

## 11 Compact flue gas probe



1	Removable filter chamber with window and particle filter	3	Connector plug for measuring instrument
2	Probe handle	4	Connection cable

### 11.1 Modular flue gas probe



1	Removable filter chamber with window and particle filter	4	Connector plug for measuring instrument
2	Lock release	5	Probe handle
3	Probe module	6	Connection cable



<b>1</b>	Removable filter chamber with window and particle filter	<b>4</b>	Connector plug for measuring instrument
<b>2</b>	Lock release	<b>5</b>	Probe handle
<b>3</b>	Probe module	<b>6</b>	Connection cable

## 12 First steps

### 12.1 Commissioning

Take the information in the **testo information** document (included with the product) into account for this.

### 12.2 Mains unit/energy storage unit

The measuring instrument is supplied with an energy storage unit.



Fully charge the energy storage unit before using the measuring instrument.



If the measuring instrument is completely discharged, allow at least 30 minutes to charge before switching the measuring instrument on and using it again.



If the mains unit is connected, the measuring instrument is automatically powered via the mains unit.



Only charge the energy storage unit at an ambient temperature of 0 to 35 °C.



Storage conditions for the energy storage unit:

- Ambient temperature from 10 to 20°C
- Charge level of 50 to 80%

#### 12.2.1.1 Charge energy storage unit

- 1 Connect the instrument plug of the mains unit to the mains unit socket on the measuring instrument.
- 2 Connect the mains plug of the mains unit to a mains socket.

- ▶ The charging process starts. LED in the condensate trap flashes red.  
The charging process stops automatically when the energy storage unit is fully charged. LED in the condensate trap has a continuous red light.



If the energy storage unit has discharged completely, the charging time at room temperature is approx. 5-6 hrs.

### 12.2.1.2 Mains operation

- 1 | Connect the instrument plug of the mains unit to the mains unit socket on the measuring instrument.
  - 2 | Connect the mains plug of the mains unit to a mains socket.
- ▶ | The measuring instrument is powered via the mains unit.
  - ▶ | If the instrument is switched off and an energy storage unit is inserted, the charging process will start automatically. Switching the measuring instrument on stops the charging of the energy storage unit and the measuring instrument is powered via the mains unit.





For longer measurements involving mains operation, Testo recommends using a combustion air temperature probe with connection cable. Self-heating of the instrument during mains operation may influence the combustion air temperature measurement using a mini ambient air probe.

## 12.3 Touchscreen operating concept

Familiarize yourself with the touchscreen operating concept before you use the measuring instrument.


Actions are mostly carried out by:

Description	
<p><b>Tapping</b></p> <p>To open applications, select menu symbols, press buttons on the display or enter characters with the keypad, in each case tap these with a finger.</p>	
<p><b>Swiping</b></p> <p>Swipe to the right or left on the display to show further views, e.g. to switch from the list view to the graphic view.</p>	

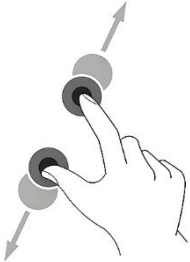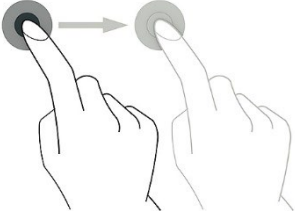Description	
<p><b>Zooming</b></p> <p>In order to make a section of the display larger or smaller, touch the display with two fingers and move them apart or together.</p>	
<p><b>Dragging</b></p> <p>You can move an element by touching it, holding it and dragging it to the required position.</p> <p>Example: Changing the display sequence of the measurement parameters.</p>	


## 12.4 Keypad

Some functions require values (figures, numerical value, unit, characters) to be entered. The values are entered via a keypad.

- ✓ Input field is enabled (flashing cursor)
- 1 Enter value: tap the required value on the display (figures, numerical value, unit, characters).
- 2 Confirm entry: Press .
- 3 Repeat steps as required.



## 12.5 Switching the instrument on and off

Current status	Action	Function
Instrument off	Press the button for a long time (> 3 s)	Instrument is switched on.
<p> When the measuring instrument is started for the first time, the setup wizard guides you through the following setting parameters step by step:</p> <ul style="list-style-type: none"> <li>- <b>Country version</b></li> <li>- <b>Language</b></li> <li>- <b>WLAN</b></li> <li>- <b>Date and Time</b></li> <li>- <b>Own company address</b></li> <li>- <b>E-mail account</b></li> </ul> <p>A tutorial can be started after the setup wizard. The tutorial demonstrates the general operation and the most important functions of the measuring instrument using examples.</p>		
Instrument on	Press the button briefly (< 1 s)	Instrument is switched to standby mode. The instrument is re-activated when the button is pressed again.
Instrument on	Press the button for a long time (>1 s)	Selection: <b>[OK]</b> Instrument is switched off or cancel the instrument being switched off with <b>[Cancel]</b> .



Standby mode has 3 time-dependent functions:

- Standby time up to 1 min: Immediate restart after pressing the key.
- Standby time up to 1 hour: After pressing the key, a restart takes place after 5 seconds.
- Standby time more than 1 hour: testo 300 NEXT LEVEL is in power save mode. After pressing the key, a restart takes place after the zeroing phase.



Unsaved readings are lost when the measuring instrument is switched off.

## 12.6 Connect probes

### Flue gas probes

- ✓ Instrument is switched on.
- 1 Insert the connector plug into the flue gas socket and lock it in place by turning it slightly clockwise (bayonet lock).



There must be no more than one extension line (0554 1201) between measuring instrument and flue gas probe.

### Temperature adapter

- ✓ Instrument is switched on.
- 1 Insert the connector plug of the probe into the probe socket.



- ▶ System recognizes the probe (info is displayed).



The parameter which is measured with an external probe is identified on the display by "ext."



## 12.7 Connecting Smart Probes and testo Smart App

The testo 300 NEXT LEVEL has the option of establishing a Bluetooth® connection with wireless probes via the testo Bluetooth® Connector as well as a connection to the testo Smart App at the same time.



If the testo 300 NEXT LEVEL is used with Smart Probes, they must be at least 20 cm apart.

### 12.7.1 Attaching the testo Bluetooth® Connector (0554 3004)



Once the testo Bluetooth® Connector is plugged in, all the warning and safety instructions for the testo 300 NEXT LEVEL apply.

#### **⚠ WARNING**

#### **Danger of suffocation!**

The testo Bluetooth® Connector is a small part that can be swallowed. Keep out of reach of children.

- 1 Connect the testo Bluetooth® Connector to the TUC 1 or TUC 2 socket on the testo 300 NEXT LEVEL.



- ▶ When connected, a testo Bluetooth® Connector icon appears in the testo 300 NEXT LEVEL status display.
- ▶ You can now connect up to 4 Smart Probes to the testo 300 NEXT LEVEL at the same time.

- 2 Press the ON button on the Smart Probe.



- ▶ The LED flashes yellow while connecting via Bluetooth® and then flashes green when the connection is established.
- ▶ Once the Smart Probe is connected with the testo 300 NEXT LEVEL, this reading appears on the display. The product name and the product ID (last three digits of the serial number) indicate at a glance which Smart Probe is providing the reading. The readings are transmitted to the testo 300 NEXT LEVEL in fixed measuring cycles of 1 second.

List	Graphics	Corestream
testo 915i 869	27,0 °C	AT
	21,0 %	O <sub>2</sub>
testo 510i 442	38,0 mbar	Δp1
testo 115i 812	27,5 °C	T1
testo 115i 770	25,1 °C	T2
	2,4 °C	ΔT1



If the testo 300 NEXT LEVEL receives no new measuring value at the expected receiving time, e.g.:

- the Smart Probe is outside the connection range
- another problem causes an interrupted connection

no more readings are shown on the testo 300 NEXT LEVEL (display: "--")



Carrying out the normal testo 300 FW update is sufficient to update the testo Bluetooth® Connector. The testo Bluetooth® Connector then receives the update when the testo 300 NEXT LEVEL is next switched off. This means that every testo Bluetooth® Connector with an older version is updated during switch-off. This is indicated by the continuous red flashing condensate trap.

## 12.7.2 Smart Probes compatible with the instrument

Order number	Designation
0560 2115 02	testo 115i - clamp thermometer with smartphone operation
0560 1510	testo 510i - differential pressure measuring instrument with smartphone operation
0563 3915	testo 915i - temperature probe with smartphone operation

## 12.7.3 Establishing a connection with the testo Smart App



In order to establish a connection, you need a tablet or smartphone with the testo App already installed on it.


You can get the App for iOS instruments in the App Store or for Android instruments in the Play Store.

Compatibility:

- Requires iOS 12.0 or later/Android 6.0 or later.
- Requires Bluetooth® 4.0.
- Requires in testo 300 software version V12.7 or newer & firmware version V1.10 or newer.



### 12.7.3.1 App user interface

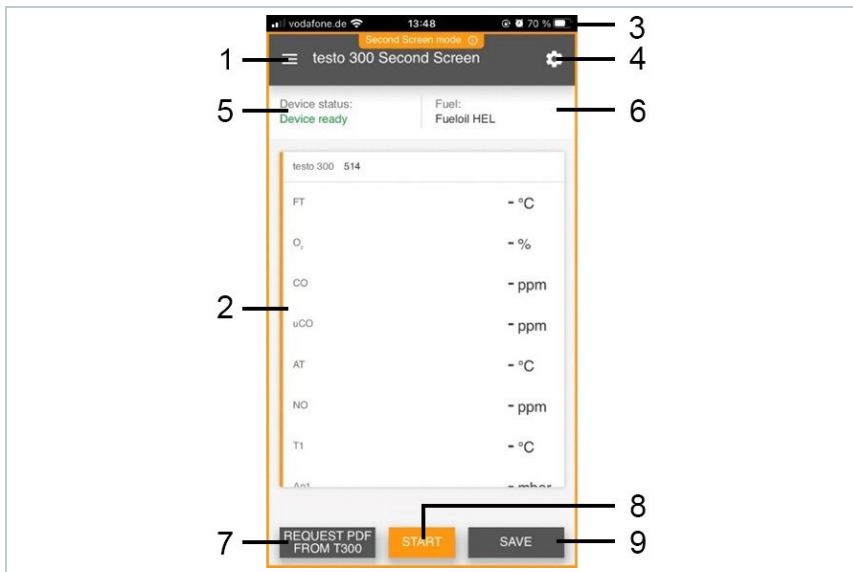

Element	Element
1 Main menu	2 Readings from testo 300 NEXT LEVEL
3 Instrument status bar	4 Configuration
5 Current testo 300 NEXT LEVEL instrument status	6 Fuel selected in testo 300 NEXT LEVEL
7 Create measurement report	8 Remote measurement start/stop on testo 300 NEXT LEVEL
9 Remote save of measurement on testo 300 NEXT LEVEL	

### 12.7.3.2 Measurement menu – testo 300 Second Screen

The testo Smart App features several stored measurement programs. Depending on the measurement task, these enable the user to configure and carry out the measurement conveniently. To use the testo 300 NEXT LEVEL with the testo Smart App, only the measurement program testo 300 Second Screen is relevant.

 
#### Basic view


In the Basic View application menu, the current measured values can be read, recorded and saved. The basic view is particularly suitable for quick and simple measurements. All Bluetooth® probes (apart from testo 300 NEXT LEVEL) compatible with the testo Smart App are displayed in the basic view.

## testo 300 Second Screen

With the testo 300 Second Screen measurement program, all measurement data of the testo 300 NEXT LEVEL can be transferred to the smartphone or tablet and the measurement can be controlled from both devices.

### 12.7.4 Connecting for the first time

- 1  Click on **Measure**.
- 2 Click on the testo 300 Second Screen.
- ▶ The following window opens.

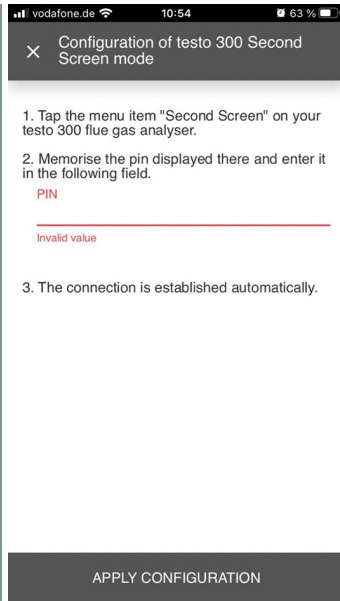

- 3 Follow the instructions and enter the pin in the field provided.




For detailed information on how to obtain the pin, see section **8.2.4 Second Screen**.



The PIN only needs to be entered when connecting for the first time. After that, the configured testo 300 NEXT LEVEL is automatically recognised by the testo Smart App and the connection is established.

- 4 Click on **Apply Configuration**.
- ▶ The connection is automatically established.

## 12.7.5 Carrying out the measurement

- 1 | Open the testo Smart App.
- 2 |  Click on **Measure**.
- 3 | Click on the **testo 300 Second Screen** measurement program.
  - ▶ The connection to the testo 300 NEXT LEVEL is automatically established (this may take a few seconds).



Once the connection has been established between the App and testo 300 NEXT LEVEL, the App will be in Second Screen mode. This is represented by a yellow frame in the App. This means that all measurement data from the testo 300 NEXT LEVEL is mirrored on the App. The measurement can now be controlled from both instruments.

- 4 | Click on required activity:
  - Start measurement: click on **Start**.
  - Stop measurement: click on **Stop**.
  - Request the measurement report from testo 300 NEXT LEVEL: click on **Request PDF from testo 300**.
  - Save measurement on the testo 300 NEXT LEVEL: Click on **Save**.



No other measuring apps from the Smart App can be used while the connection is being established.




To establish a connection, the Smart App connection must be activated on the testo 300 NEXT LEVEL.



To establish a connection, the WLAN must be activated on the smartphone/tablet.

## 12.7.6 Settings – language

- 1 |  Click on **Settings**.
  - ▶ The Settings menu opens.
- 2 | Click on **Language**.
  - ▶ A window with different languages opens.

3 | Click on the required language.

▶ | The required language is set.

## 12.7.7 Help and Information

Under Help and Information, you will find information about the testo Smart App. The stored tutorial can be called up and implemented. This also where legal information can be found.

### 12.7.7.1 Instrument information

1 |  Click on **Help and Information**.

▶ | The **Help and Information** menu opens.

2 | Click on **Instrument information**.

▶ | The current App version, Google Analytics instance ID, refrigerant version and update are displayed for the connected instrument.

Automatic updates for instruments can be enabled or disabled.

> | Use the slider to activate or deactivate **Update for connected instruments**.

### 12.7.7.2 Tutorial

1 |  Click on **Help and Information**.

▶ | The **Help and Information** menu opens.

2 | Click on **Tutorial**.

▶ | The tutorial shows you the most important steps prior to commissioning.

### 12.7.7.3 Exclusion of liability

1 |  Click on **Help and Information**.

▶ | The **Help and Information** menu opens.


2 | Click on **Exclusion of liability**.

- ▶ The data protection information and licence usage information is displayed.



# 13 Using the product

## 13.1 User interface

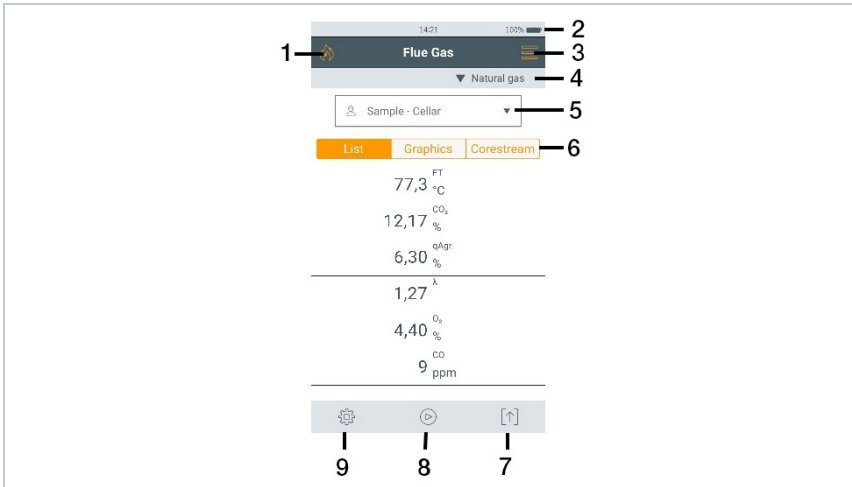


1		<b>Measuring applications</b>
2		Status bar
3		<b>Main menu</b>
4		Open <b>Fuels</b> selection list
5		Select <b>Customer/Measuring site</b>
6		Select reading display type: <ul style="list-style-type: none"> <li>List</li> <li>Chart</li> <li>Corestream</li> </ul>
7		Edit measurement data
8		Start measurement
		Pause measurement
		Stop measurement
9		<b>Options</b>

Further symbols on the user interface (without numbering)

	Retry measurement
	One level back

	One level back
	One level back
	Cancel process
	Print values
	Save report
	Save and send report
	Generate QR code

### 13.1.1 List reading display type

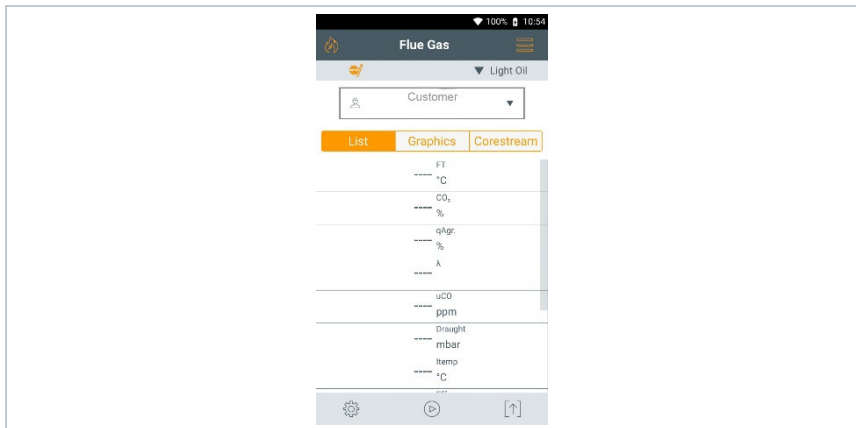


The measurement parameters/units and the number and order of the measurement parameters displayed in the **List** reading display type can be set, see Section **Edit View**.

Only those measurement parameters and units that are enabled in the reading display appear in the reading display, in the saved measurement protocols and on the report printouts.

The settings only apply to the measurement type currently enabled.

## 13.1.2 Graphics reading display type

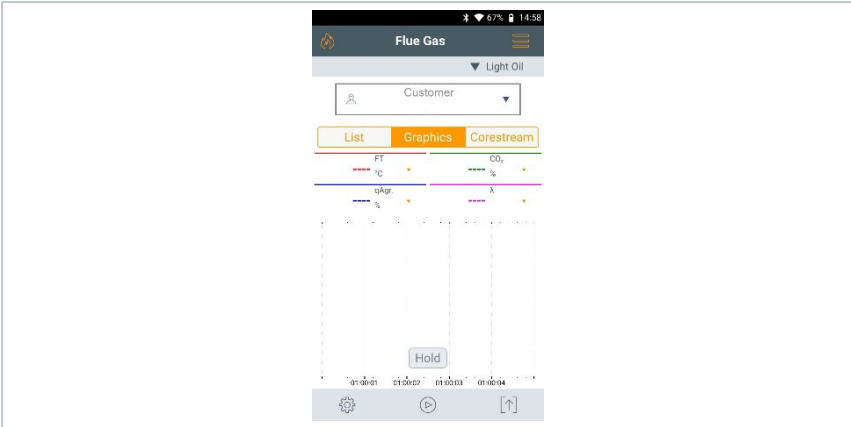


In the **Graphics** reading display type, the reading progression can be displayed as a line diagram.

A maximum of 4 measurement parameters can be set at any one time. Only those measurement parameters/units can be displayed that are available in the **List** reading display type.



The measurement parameters/units can be adjusted if necessary:


- ✓ Measurement view is enabled.
- 1 Call up function: **Graphics**
- 2 Tap on ▼ in order to open selection list for measurement parameters/units.
- 3 Select desired measurement data / units.
- ▶ Selection is accepted automatically.
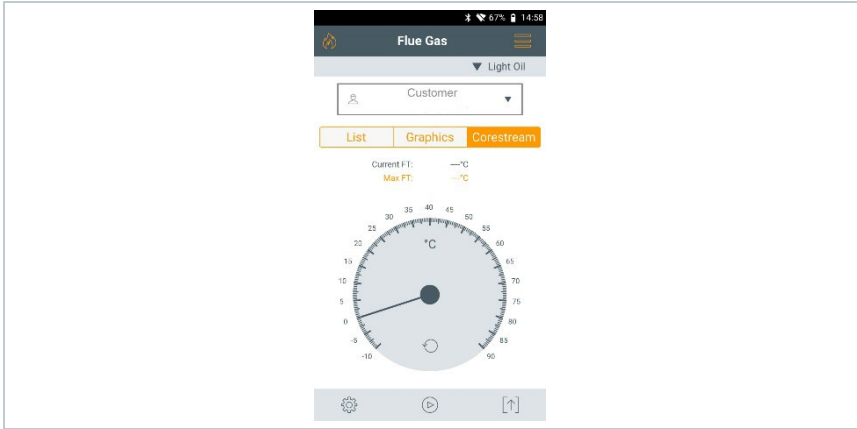
### 13.1.3 Corestream reading display type




Search for corestream:


- ✓ Measurement view is enabled.
- 1 Call up function: **Corestream**
- 2 Start search: 
- 3 Perform zeroing.
  - ▶ The measurement starts automatically after zeroing.
- 4 Align the flue gas probe in the flue gas duct so that the probe tip is in the corestream (area of the highest flue gas temperature **Max FT**).
  - Grey value/grey pointer: Display of current flue gas temperature
  - Orange value/orange pointer: Display of maximum flue gas temperature
  - Reset values/pointer: 

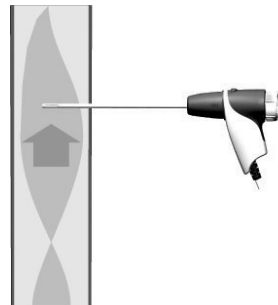

## 13.2 Overview of main menu (☰)

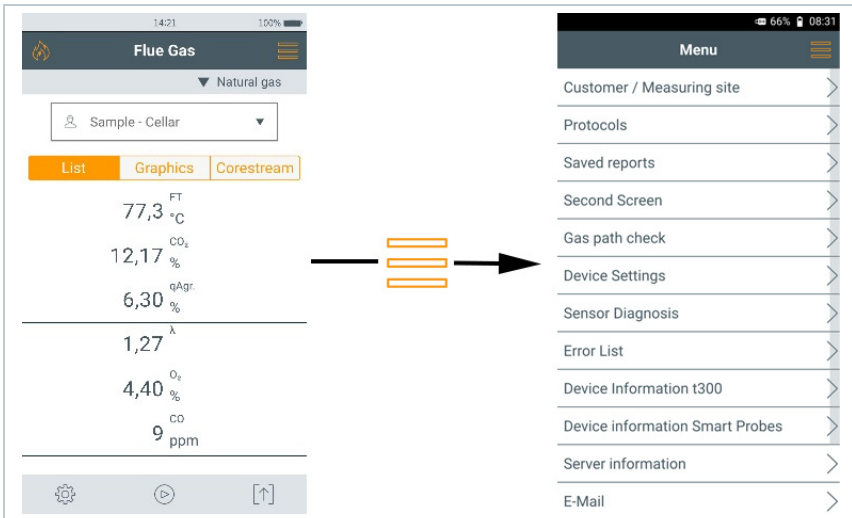

Main menu	Description
<b>Customer/Measuring site</b>	Create, edit and delete customer and system information.
<b>Protocols</b>	Call up, delete and send measurements that have been performed (various formats possible).
<b>Saved reports</b>	Call up and delete measurement report.
<b>Second Screen</b>	Connection to the testo Smart App can be activated or deactivated.
<b>Gas path check</b>	For flawless operation of the measuring instrument, regular tightness testing of measurement systems (measuring instrument + flue gas probe) is recommended.

Main menu	Description
<b>Device Settings</b>	<p>Settings</p> <ul style="list-style-type: none"> <li>- Country version and language</li> <li>- WLAN</li> <li>- Date &amp; Time</li> <li>- Own company address</li> <li>- Hotspot</li> <li>- Rechargeable battery management</li> <li>- Display brightness</li> <li>- Manage e-mail accounts</li> <li>- CO/NO sensor protection</li> <li>- NO2 addition</li> <li>- O2 reference</li> <li>- Alarm limits</li> </ul>
<b>Sensor Diagnosis</b>	Overview of the sensors fitted and their condition.
<b>Error List</b>	Call up error reports
<b>Device information</b>	<p>Information</p> <ul style="list-style-type: none"> <li>- Device name</li> <li>- Serial number</li> <li>- Instrument identification number</li> <li>- Last service</li> <li>- Free memory</li> <li>- Operating hours</li> <li>- Operating hours since last service</li> <li>- Software version</li> <li>- Firmware version</li> <li>- Firmware date</li> <li>- qA version</li> <li>- qA date</li> </ul>
<b>Server information</b>	Information about the available server
<b>E-Mail</b>	<p>Set up e-mail account and the e-mail account can be called up.</p> <p> To set up the e-mail account on the testo 300 NEXT LEVEL the IMAP setting in your e-mail account with your provider must be activated. You can find more information in your e-mail account itself, e.g. under FAQs or Settings.</p>


Main menu	Description
<b>My Apps</b>	Additional applications <ul style="list-style-type: none"> <li>- Alarm clock</li> <li>- E-mail</li> <li>- Gallery</li> <li>- Browser</li> <li>- Calendar</li> <li>- Pocket calculator</li> <li>- QuickSupport</li> <li>- File manager</li> </ul>
<b>Help</b>	Aids <ul style="list-style-type: none"> <li>- Device Registration</li> <li>- Tutorial</li> <li>- Setup Wizard</li> <li>- Help Online</li> <li>- Testo website</li> <li>- Update via USB</li> </ul>

**13.2.1.1 Customer / Measuring site**

Create, edit and copy Customer / Measuring site information.  
 Customer / Measuring site can be deleted.

- 1 | Call up function:  | **Customer / Measuring site**
- ▶ | **Customer / Measuring site** menu is displayed.

The following functions are available:

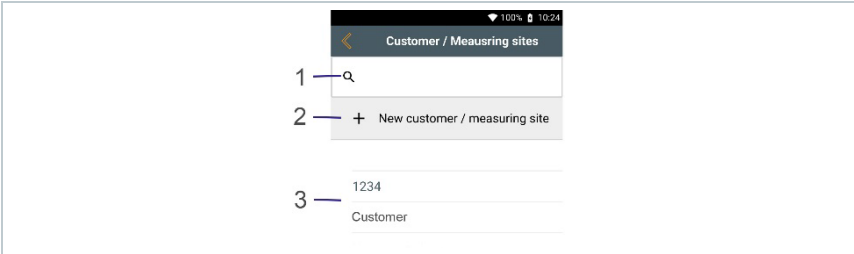

<b>1</b>	Search	<b>3</b>	View/edit existing data about Customer / Measuring site
<b>2</b>	Create new Customer / Measuring site		

**Search**

- 1 | Tap **Search** operating field.

▶ Text cursor flashes.

2 Enter search text using the text editor.



Via the search text, only the Customer / Measuring site is displayed that contains characteristics of the search text.

3 Confirm search result: press .

### Create new customer

1 Tap **+ New Customer / Measuring site**.

▶ **Customer** input screen is opened.

2 Tap the required input field.

▶ Keypad appears.

3 Enter the information via the keypad.

4 Confirm each input with .



The **Customer/Company Name** input field is a required field and must be filled in.

5 **Save**.

▶ Customer is created.



In order to be able to select a customer, at least one measuring site must be created and selected!

### Create new measuring site

✓ A customer is created.

1 Tap **Measuring site** button.

2 Tap **+ New measuring site** operating field.


▶ **Measuring site parameters** menu is opened.

3 Enter data.





The **Name of measuring site** input field is a required field and must be filled in.

- 4 | Confirm each input with .



An additional button (>) appears in some input fields.  
These buttons contain a selection of parameters which are adopted in the input field by tapping on them.

- 5 | **Save.**


### Edit customer



- 1 | Tap customer.
- ▶ | **Customer** input screen is opened.
- 2 | Input fields can be edited.


### Edit measuring site

- ✓ | **Customer** input screen is open.
- 1 | Tap **Measuring site** button.
- 2 | Select **Measuring site**.
- 3 | Edit data.
- 4 | **Save.**

## 13.2.2 Protocols

- 1 | Call up function:  | **Protocols**
- ▶ | **Protocols** menu is displayed.
- 2 | Select customer.
- 3 | Open measuring site.

- 4 Measurements for the selected customer/measuring site can be viewed  and deleted .

More options for selected measurement  :



Print readings




Save report



Save and send report



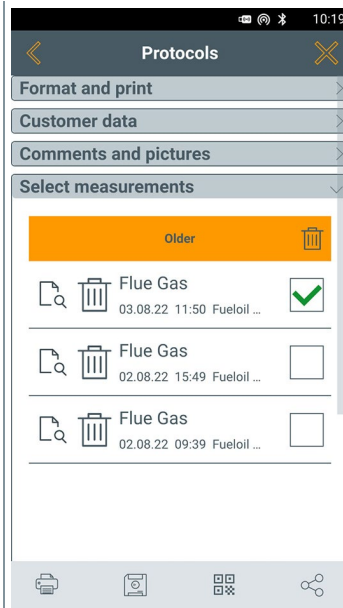


Generate QR code



The following information can be selected/added to create a report.

Category	Description
<b>Format and print</b>	Select output format(s): <ul style="list-style-type: none"> <li>- <b>CSV</b> (comma separated text file, e.g. for Microsoft® Excel)</li> <li>- <b>PDF</b></li> <li>- <b>QR</b></li> <li>- <b>QR_ZIV</b></li> <li>- <b>ZIV 2.00</b> (XML file, complying with the regulations of the Guild of Master Chimney Sweeps in Germany).</li> </ul>
<b>Customer data</b>	Enter/add contact details.
<b>Comments and pictures</b>	Enter comments and <b>Add</b> (opens the <b>Gallery</b> ). Pictures are only included when output is in PDF format.

Category	Description
<b>Select measurements</b>	All saved measurements are displayed in one of the following time categories, depending on the creation date: <b>Today</b> , <b>Yesterday</b> or <b>Older</b> . The measurements selected to create the report are identified with  .
<b>Signature</b>	Sign report.

 
- 5 | Back to the main menu: tap   
or  
Back to the measurement menu: tap .



If you have saved more than 100 measurements, they can be stored in the archive folder. A dialogue window appears automatically and you can choose whether you want to create this archive folder or not.

### 13.2.3 Saved reports

The measurement reports that have been created are stored under **Saved reports**. These can be called up again, sent or deleted.

- 1 | Call up function:  | **Saved reports**.
- ▶ | The **OI File Manager** folder is opened and the available reports are displayed.


#### Open report

- 1 | Tap required report.
- ▶ | Report is displayed as a PDF.

#### Delete report(s)

- 1 | Touch required report for >2 sec.

- ▶ Report is marked.

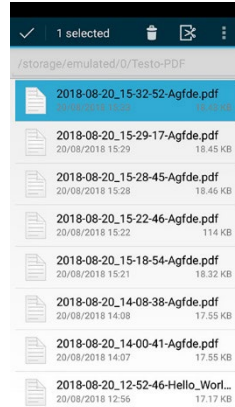

- 2 If necessary, mark more reports by tapping.

- 3 Delete report(s): tap .

### Send report(s)

- 1 Touch report for >2 sec.

- ▶ Report is marked.

- 2 If necessary, mark more reports by tapping

- 3 Tap  symbol.

- 4 Tap **Send**.

- 5 Send report by e-mail.

### Sort report(s)

- 1 Tap  symbol.

- 2 Tap **Settings**.




 
- 3 Disable **in ascending order** under sort settings.

- ▶ The latest reports are displayed first.

## 13.2.4 Second Screen



In the Second Screen menu item, the Smart App connection can be activated or deactivated. This is also where the connection PIN required for the initial connection is stored.

To connect the testo 300 NEXT LEVEL to your smartphone or tablet, the Second Screen connection must be activated.

- 1 Call up function:  | **Second Screen**
- 2 Tap the **Smart App connection** selection field to activate () / deactivate ()
- 3 When connecting to the testo Smart App for the first time: enter the displayed connection PIN in the testo Smart App, under the testo 300 Second Screen measurement program.
- 4 Back to **Main menu**: tap .

## 13.2.5 Gas path check

For flawless operation of the measuring instrument, regular tightness testing of measurement systems (measuring instrument + flue gas probe) is recommended.

- 1 Call up function:  | **Gas path check**
  - ▶ Gas path check starts automatically.
- 2 Place the black sealing cap on the tip of the flue gas probe.
  - ▶ The pump flow is displayed. If the flow rate is less than 0.02 l/min, the gas paths are not leaking and the measurement is ended.
- 3 Remove the sealing cap from the probe tip.
- 4 Back to the main menu: tap .

## 13.2.6 Device settings


### 13.2.6.1 Country version and language

Set up your measuring instrument country-specifically.

The country version configuration affects the measurement parameters, fuels, fuel parameters and the bases of and formulas for calculations that are enabled.

The country version configuration affects the user interface languages that can be enabled.

- 1 Call up function:  | **Device Settings** | **Country version and language**

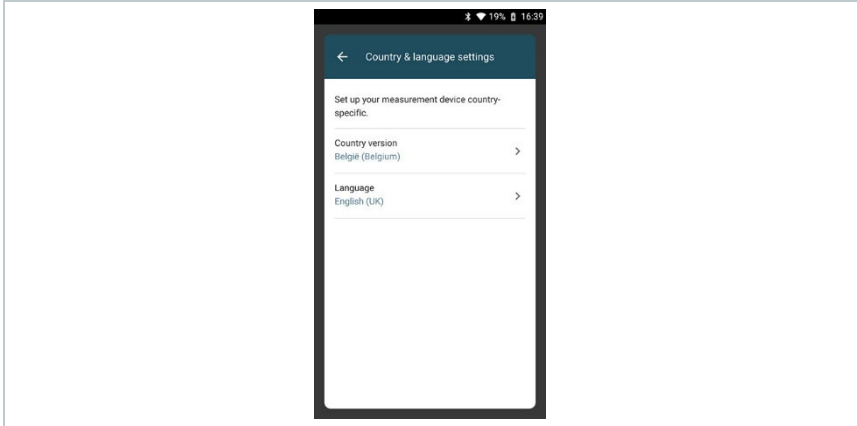

### Set country version

- 1 Tap **Country version** selection field.
  - ▶ The available country versions are displayed.
- 2 Select country version.
  - ▶ The query **Change country version?** is displayed.
- 3 Tap **Next**.



Configuration of the country version can be ended by cancelling. The display goes back to **Device Settings**.

- ▶ The selected country version is configured (this may take a few minutes). The **Device Settings** menu is then displayed.
- ▶ Restart the measuring instrument to complete its configuration.

### Set language

- ✓ | **Country & language settings** menu
- 1 Tap **Language** selection field.

- ▶ The available languages for the selected country version are displayed.
- 2 Select **Language** and tap ←.
- ▶ The instrument is reconfigured to the selected language.
- 1 Back to the main menu: tap ← and ↩.

### 13.2.6.2 Wireless LAN



A radio link, such as a Wireless LAN, is not relevant for carrying out measurements.

Set up a connection to a Wireless LAN router or a Wireless LAN hotspot. The connection enables the sending of measurement reports on site by e-mail.

- 1 Call up function: ☰ | **Device Settings** | **Wireless LAN**.
- 2 Tap Wireless LAN selection field.
- 3 Enable Wireless LAN: tap **Off** button or move grey point to the right.
  - ▶ Instrument switches to **On**. The point changes to green.
  - ▶ Display of all available Wireless LAN routers or Wireless LAN hotspots in the vicinity.
- 4 Select Wireless LAN router or Wireless LAN hotspot.
- 5 Tap **Connect**.
- 6 It may be necessary to enter the password for the selected Wireless LAN.
  - ▶ Connection is set up and shown by **Connected**.

#### Further entries via ⓘ button

Category	Description
<b>Add network</b>	Enter network name using the keypad, set security standard and if necessary enter further options. Save entry.
<b>Saved networks</b>	Display of saved networks.

Category	Description
Updating	Updating the display of available networks.
Advanced	Further Wireless LAN settings are displayed.



The Wireless LAN is disabled in standby mode and enabled again once you quit standby mode. The enabling process may take a few seconds.


### 13.2.6.3 Date/Time




You can set the date, time and time zone in the **Date/Time** menu. You can choose between the 24 hr or AM/PM formats for the time.



If the Wireless LAN has already been enabled, the Date/Time provided by the network is automatically set.

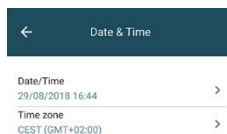- 1 Call up function:  | **Device Settings** | **Date/Time**.

 


- ▶ Various setting options are displayed. Depending on your requirements, you can
    - Enable (●) / disable (▶) selection fields by tapping
    - Open other selection fields
    - Enter parameters using the keypad
    - Set 24 hr or AM/PM format: 24 hr (●) / AM/PM (▶)
- 2 Back to the **Device Settings** menu: Tap  |  | .

#### Set Date/Time manually


- 1 Tap **Date/Time**.



2 Tap **Autom. Date/Time**.

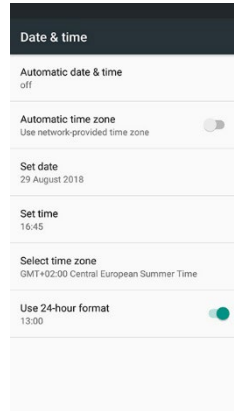

3 Select **Off**.

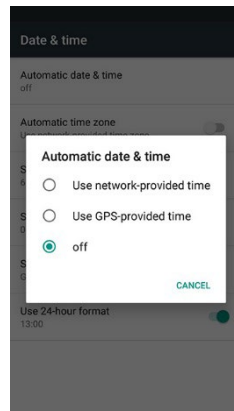

▶ **Autom. Date/Time** is disabled. The pop-up window closes automatically.

4 Tap **Set Date**.

5 Select date via the calendar and confirm with **OK**.

6 Tap **Set Time**.

7 Tap hour and set.

8 Tap minute, set and confirm with **OK**.

9 Back to the **Device Settings** menu: tap  |  | .

### Set time zone manually

- 1 Tap **Time Zone**.
- 2 Tap **Autom. Time Zone** and disable (↔).
- 3 Tap **Select time zone**.
- 1 Select desired time zone.
- 2 Back to the **Device Settings** menu: tap ↩ | ← | ↩.

### 13.2.6.4 Own company address

Enter own company address. This information will be shown on the reports.

- 1 Call up function: ☰ | **Device Settings** | **Own company address**  
▶ **Contact information** input screen is opened.
- 2 Tap the required input field.  
▶ Keypad appears.
- 3 Enter the information via the keypad.
- 4 Confirm each input with ✓.
- 5 Back to the **Device Settings** menu: tap ↩.

### 13.2.6.5 Hotspot

Enable a hotspot in order to be able to transmit readings to software / industry software.

 


The interface must also be available in the software / industry software.


 
---

- 1 Call up function: ☰ | **Device Settings** | **Hotspot**
- 2 By tapping the selection field, enable (●) / disable (○) **Hotspot**.
- 3 Back to the **Device Settings** menu: tap ↩.


 
### Edit hotspot name and password

- 1 Tap **Hotspot settings**.
- 2 Select **Wireless LAN Hotspot**.
- 3 Tap **Set up Wireless LAN Hotspot**.
- 4 Edit network name and password.
- 5 Tap **Save**.
- 6 Back to the **Device Settings** menu: tap .


 
### 13.2.6.6 Rechargeable battery management

- 1 Call up function:  | **Device Settings** | **Rechargeable battery management**
- 2 Select between the standby options by tapping the selection field.
- 3 Back to the **Device Settings** menu: tap .

### 13.2.6.7 Display brightness

- 1 Call up function:  | **Device Settings** | **Display brightness**
- 2 Adjust the display brightness using the slide control.
- 3 Back to the **Device Settings** menu: tap .

### 13.2.6.8 Manage e-mail accounts

- 1 Call up function:  | **Device Settings** | **Manage e-mail accounts**.
- 2 An e-mail account can be added by clicking on the plus icon.
- 3 Back to the **Device Settings** menu: tap .

### 13.2.6.9 CO/NO sensor protect



Limit values can be set to protect the CO/NO sensors against overload. Sensor protect is enabled if these are exceeded:

- Fresh air dilution if exceeded (only for instruments with the "Dilution" option)

- Shutdown if exceeded again




 
When dilution is enabled, the CO and CO undiluted values are displayed in a blue font. A “\*\*” is shown on the printout after the name of both values to indicate dilution.

- 1 | Call up function:  | **Device Settings** | **Sensor Protect**
- ▶ | **CO** input screen: **Set Sensor Setting** is opened.
- 2 | Enter the alarm limit value via the keypad.
- 3 | Confirm input with .





The limit values must be set to 0 ppm to disable sensor protect.

### 13.2.6.10 NO<sub>2</sub> addition

- 1 | Call up function:  | **Device Settings** | **NO<sub>2</sub> addition**
- 2 | Enter the addition value using the keyboard.
- 3 | Confirm the input with **OK**.
- 4 | Back to the **Device Settings** menu: tap .


### 13.2.6.11 O<sub>2</sub> reference

The O<sub>2</sub> reference value of the current fuel can be set.

- 1 | Call up function:  | **Device settings** | **O<sub>2</sub> reference**
- ▶ | **O<sub>2</sub> reference current fuel** input screen is opened.
- 2 | Enter the value via the keypad.
- 3 | Confirm input with .
- 4 | Tap **[OK]**.

### 13.2.6.12 Alarm limits

Alarm limits can be set for the **CO Ambient** measurement type. An audible alarm signal is triggered when the alarm limit is reached.

- 1 | Call up function:  | **Device Settings** | **Alarm limits**
- ▶ | **Alarm limits** input screen is opened.
- 2 | Tap directly on the value in the relevant input field.
- ▶ | Keypad appears.
- 3 | Enter the value via the keypad.
- 4 | Confirm each input with ✓.
- 5 | Tap **[OK]**.


### 13.2.7 Sensor diagnosis

Overview of the sensors fitted and their condition.

- 1 | Call up function:  | **Sensor Diagnosis**

### 13.2.8 Error list

Call up error reports.

- 1 | Call up function:  | **Error list**

### 13.2.9 Device information

Call up device information.

- 1 | Call up function:  | **Device information**

### 13.2.10 Server information

Information about the available server.

- 1 | Call up function:  | **Server information**


### 13.2.11 E-mail

Setting up an e-mail account




An e-mail account has to be set up in order to be able to send reports as e-mails. A Wireless LAN connection must be available to set the account up.

---

- 1 | Call up function:  | **E-Mail**
  - 2 | Enter e-mail address.
  - 3 | Enter password.
  - 4 | Set account options, such as synchronization interval
  - 5 | Entry of account name (optional) and name which appears with the sent e-mails.
- ▶ The inbox of the e-mail account is opened.
- 



If the system does not accept the e-mail address and password combination, but you are certain it is correct, check the following possible solutions:



- Open e-mail client, e.g. gmail, on a PC and check e-mail reception. Your provider may have sent you a security e-mail that you need to acknowledge before the e-mail account can be accepted on the testo 300 NEXT LEVEL.
  - Enable IMAP account  
To do this, call up your e-mail account on the PC. You will find the setting for the common e-mail providers, e.g. gmx, under settings - POP/IMAP. Account-specific information about the enabling of the IMAP account is supplied by the relevant provider. Find out about this from the relevant provider or on the Internet.
  - Manual set-up of the e-mail account
    1. Call up function:  | **E-Mail**.
    2. Enter e-mail address.
    3. Select **Manual set-up**.
    4. Select **Private account type (IMAP)** (recommended).
    5. Enter password.
    6. Enter/change server, port and security type.  
This information is e-mail account specific and is supplied by your e-mail account provider. Find out about this from your account provider or on the Internet.
    7. **[Next]**
    8. Enter/change SMTP server, port and security type.
-

This information is e-mail account specific and is supplied by your e-mail account provider. Find out about this from your account provider or on the Internet.

9. [\[Next\]](#)
10. Set account options, such as synchronization interval.
11. [\[Next\]](#)
12. Entry of account name (optional) and name which appears with the sent e-mails.
13. [\[Next\]](#)


▶ The inbox of the e-mail account is opened.

### Call up e-mail account

- 1 | Call up function:  | **E-Mail**
- ▶ **Inbox** menu is opened.
- 2 | Create e-mail: tap .
- ▶ **Compose** menu and the keypad is opened.
- 3 | Enter the e-mail address via the keypad.
- 4 | Fill in subject and create text.










If required, additional files can be attached to the e-mail using the paper clip symbol.

- 5 | Send e-mail: tap .
- ▶ E-mail is sent.

## 13.2.12 My Apps

Additional applications

- 1 | Call up function:  | **My Apps**
- ▶ Available Apps are displayed.

Symbol	Name
	Alarm clock
	Gallery
	Browser
	Calendar
	Calculator
	Quick Support

### 13.2.13 Help

#### 13.2.13.1 Device registration

1 | Call up function:  | **Help** | **Device Registration**

Testo would like to offer you the best possible customer service. Register your instrument so that, when you call, our employees in Customer Service have all the information they need available at all times, so that they can quickly provide you with further assistance.

Register at: <https://testo.com/register>

You will find the information you need for registration on the sticker on the back of the instrument.

Follow the instructions on the display.

Registration gives you the following advantages:

- 1 year's additional warranty for free
- Always being up to date with the latest from Testo

#### 13.2.13.2 Tutorial

1 | Call up function:  | **Help** | **Tutorial**

The tutorial provides you with an overview of and an introduction to the operation and functions of the instrument.

#### 13.2.13.3 Setup Wizard

1 | Call up function:  | **Help** | **Setup Wizard**



2 | The following settings can be made:

Function	Section
Country version and language	8.2.6.1
WLAN	8.2.6.2
Date/time	8.2.6.3
Contact information	8.2.6.4 (own company data)
Registration	8.2.13.1 (instrument registration)

3 | Next >


▶ Setup is complete.

4 | If necessary, tap **Start tutorial** or **End setup**.


### 13.2.13.4 Wireless firmware update



Make sure that **Enable update for connected instruments** under **Help and Information | Instrument information** is always activated.

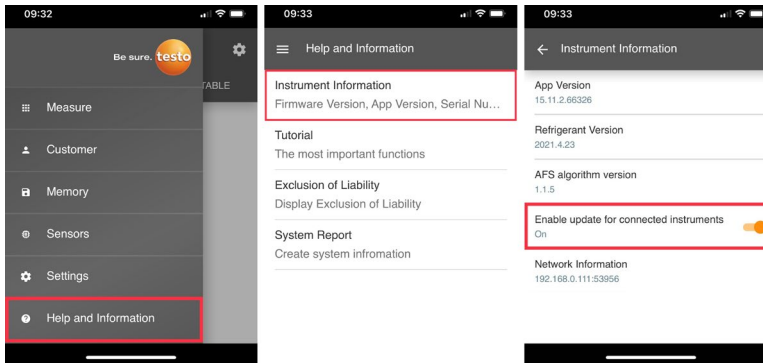

- ✓ As soon as a new update is available, a notification will appear in the display.

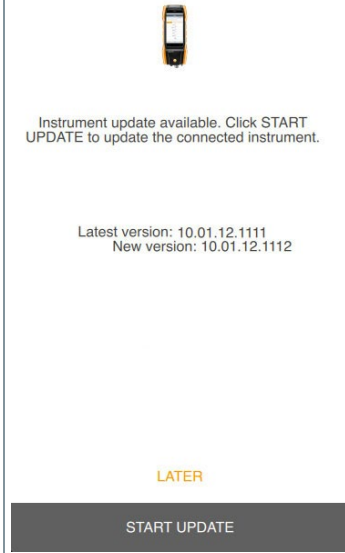

1 Tap **Start update**.

- ▶ The update is carried out.

1.1 Tap **Later**.


- ▶ The notification will appear again upon the next connection.



The Bluetooth connection must not be interrupted during the instrument update. The update must be carried out completely and takes approx. 5 to 10 minutes depending on the smartphone used.

---

- ▶ After the update, the measuring instrument will reboot. The firmware can be checked in the instrument menu or via the app. It is recommended to restart the testo Smart App after performing the instrument update.

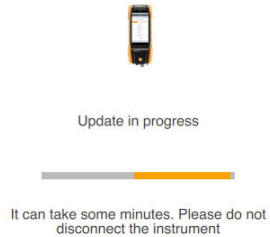


For wireless firmware updates, a battery power of >10% must be ensured on the measuring instrument for an update to be carried out completely.

### 13.2.13.5 Update via USB



Testo recommends updating the firmware only when the charge capacity is full.

You will find the current instrument software (firmware) on the Testo homepage [www.testo.com](http://www.testo.com) under the product-specific downloads.

- 1 Call up function:  | **Help** | **Update via USB**
- 2 Confirm info with **OK**.
- ▶ Firmware update is started.
- 3 Insert the connecting cable (0449 0134) into the USB port on the measuring instrument, then connect it to the PC.
- ▶ Your PC identifies the measuring instrument as a removable medium.

- 4 Copy the new instrument software file (t300.zip) to the identified removable medium.  
Length of the copying process: approx. 10 – 15 minutes
- 5 Disconnect the connecting cable from the measuring instrument.
  - ▶ Once the instrument software has been updated (duration approx. 1.5 hrs), the measuring instrument will automatically reboot and is ready for use again.

# 14 Performing the measurement

## 14.1 Prepare for measurement

- 1 Check the condensate container fill level and if necessary empty container, see Section 10.5 **Empty condensate trap**.
- 2 Check the particle filter of the flue gas probe for contamination and replace it in good time. If necessary, see Section 10.10 **Check/replace particle filter**.

### 14.1.1 Zeroing phases

#### Measuring the combustion air temperature (AT)

If no external combustion air temperature probe or testo 915i Smart Probe is connected, the combustion air temperature is measured via the integrated temperature probe.

#### Gas zeroing

The gas sensors are automatically zeroed after the instrument is switched on.




**testo 300 NEXT LEVEL without probe zeroing option in the flue gas:**

The flue gas probe must be in fresh air during the zeroing phase (30 seconds)!

**testo 300 NEXT LEVEL with probe zeroing option in the flue gas:**

The flue gas probe may already be in the flue gas duct during the zeroing phase (30 seconds).

- > Start zeroing of the gas sensors manually:  | [Zeroing Gas Sensors](#)

#### Draught/pressure zeroing

The pressure sensors are zeroed when a pressure measuring function is called up.



**testo 300 NEXT LEVEL without probe zeroing option in the flue gas:**

The flue gas probe must be in fresh air during the zeroing phase! The instrument must not be pressurized during zeroing!

**testo 300 NEXT LEVEL with probe zeroing option in the flue gas:**

The flue gas probe may already be in the flue gas duct during the zeroing phase. The pressure socket of the instrument must be free (depressurized, not closed).

## 14.1.2 Carry out gas path check



Regularly check the measurement system (measuring instrument + flue gas probe) for leaks.


In particular, too high an O<sub>2</sub> value may be an indicator of a leaking measurement system.

- >  | Gas path check.

## 14.1.3 Use of flue gas probe


### Check thermocouple before use

- > The thermocouple of the flue gas probe must not be touching the probe cage.  
Bend the thermocouple back if necessary.

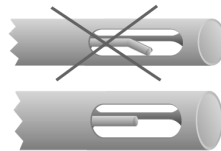


### Align flue gas probe


- > The thermocouple must be freely exposed to the flue gas flow.  
Align the probe by turning it as required.

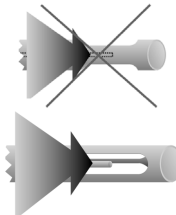



### Search for corestream


- ✓ The tip of the probe is in the corestream of the flue gas.
- 1 Select **Corestream**.
  - 2 Start corestream search: tap .
  - 3 Perform zeroing. Please follow the instructions.

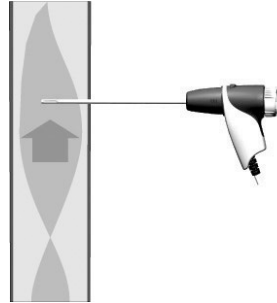- 4 Align the flue gas probe in the flue gas duct so that the probe tip is in the corestream (area of the highest flue gas temperature Max FT).



- ▶ Grey value/grey pointer: Display of current flue gas temperature
  - ▶ Orange value/orange pointer: Display of maximum flue gas temperature
  - > Reset values/pointer: .
- 5 End corestream search: tap .

## 14.2 Overview of measurement types ( )

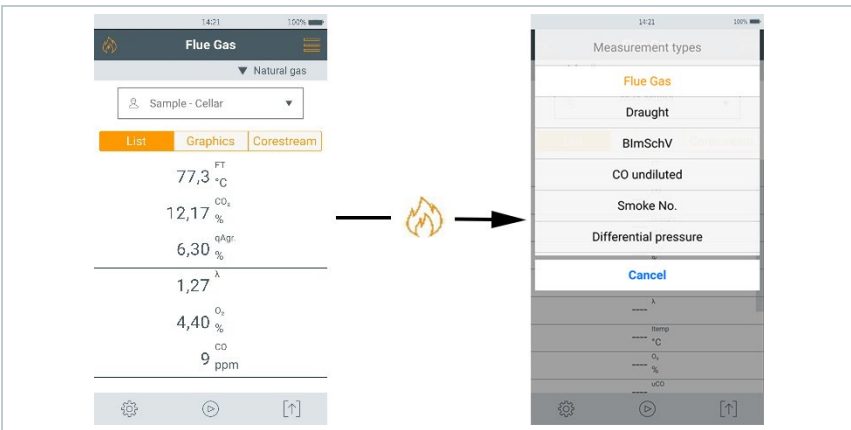

Measurement types
Flue gas
Draught
BImSchV
CO undiluted
Smoke No.
Differential pressure

<b>Measurement types</b>
Differential temp.
O <sub>2</sub> Air
Gas flow
Oil flow
CO ambient
Tightness test 1
Tightness test 2
Let by test
4 Pa measurement

### 14.2.1 Flue gas



In order to maintain the measuring accuracy of the instrument, the correct fuel must be selected or configured.

Tap ▼ (Fuels)  
> Select fuel.



To achieve usable measurement results, the test time of a flue gas measurement should be at least 3 minutes and the measuring instrument should display stable readings.



If a separate **CO undiluted** measurement has not yet been carried out, this value is calculated using the readings from the flue gas probe and continuously updated.



For this type of measurement, the **Averaging** option is also available. See **Averaging** section.



Up to four Smart Probes can be used simultaneously during flue gas measurement. This enables parallel measurement of the combustion air temperature, the differential temperature and the differential pressure.


The following Smart Probes can be connected:


testo 915i (0563 3915), testo 510i (0560 1510), testo 115i (0560 2115 02)

---

1 | Call up function:  | **Flue Gas**



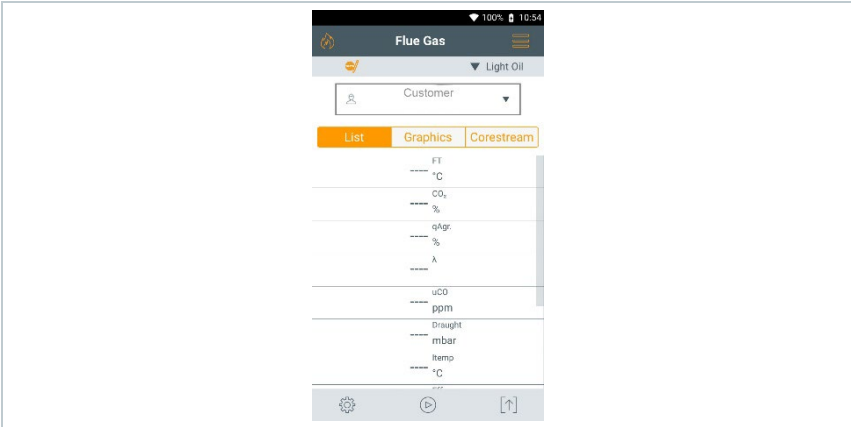




- 2 Start measurement: tap .
- ▶ Zeroing takes place.
- ▶ Readings are displayed.



If the **Draught** measurement parameter is enabled in the reading display, a draught measurement is automatically started in parallel to the flue gas measurement. In the **List** measurement data view, the parallel draught measurement can be stopped/restarted. This draught measurement is performed separately to a measurement of the **Draught** measurement type.



For the draught measurement, the minus connection for differential pressure measurement must be free (ambient pressure, not closed).

- 3 Tap on the draught reading display  or  next to it.
- 4 End measurement: tap .

### Automatic display after connection of one or more Smart Probe testo 115i or testo 915i during flue gas measurement

If several temperature probes are connected in total (external probes and/or testo 115i or testo 915i), the temperature probes are used for flue gas measurement according to the following procedure.

The AT probe = external cable probe always has first priority.

## 14 Performing the measurement

Connected cable probe (maximum 1 possible)	Number of connected Smart Probes (testo 115i and/or testo 915i)	Display and use of the temperature probe in testo 300 NEXT LEVEL
No	1	t115i: additional temperature channel T t915i: AT probe for the AT measurement
Yes	-	Cable probes: AT probe for the AT measurement
Yes	1	Cable probes: AT probe for the AT measurement t115i/ t915i: additional temperature channel T
No	2	Internal temperature sensor t300 NEXT LEVEL: AT probe for the AT measurement t115i/t915i: additional temperature channel dT
Yes	2	Cable probes: AT probe for the AT measurement t115i/t915i: additional temperature channel dT
No	3	A) min. one t915i connected t915i: AT probe for the AT measurement t115i/t915i: additional temperature channel dT  B) no t915i connected Internal temperature sensor t300 NEXT LEVEL: AT probe for the AT measurement t115i: additional temperature channel dT and temperature channel T
Yes	3	Cable probes: AT probe for the AT measurement t115i/t915i: additional temperature channel dT and temperature channel T
No	4	Internal temperature sensor t300 NEXT LEVEL: AT probe for the AT measurement t115i/t915i: 2 additional temperature channels dT

Connected cable probe (maximum 1 possible)	Number of connected Smart Probes (testo 115i and/or testo 915i)	Display and use of the temperature probe in testo 300 NEXT LEVEL
Yes	4	Cable probes: AT probe for the AT measurement t115i/t915i: 2 additional temperature channels dT


Gilt nur für die Landesversion Italien:



Wenn Sie die Verbrennungstemperatur (VT) mit der Abgassonde messen möchten, speichern Sie sie mit der Taste AT = VT, sobald die Temperatur erreicht ist.

Im nächsten Schritt können Sie die gespeicherte Temperatur verwenden, um die Abgasmessung im Rauchgaskanal durchzuführen.


1 Funktion aufrufen: | **Abgas**

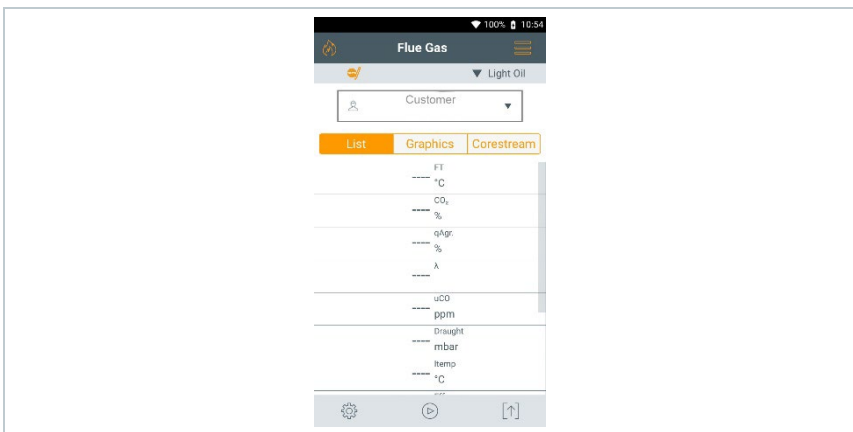


2 Messung starten: antippen.

▶ Nullung wird durchgeführt.

▶ Messwerte werden angezeigt.

3  AT antippen.

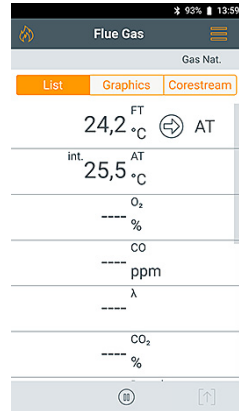




- ▶ Die Verbrennungstemperatur wurde gespeichert und wird für die Kalkulation berechneter Werte verwendet.



Ist die Messgröße **Zug** in der Messwertanzeige aktiviert, wird automatisch eine Zugmessung parallel zur Abgasmessung gestartet. In der Messdatenansicht **Liste** kann die parallele Zugmessung gestoppt / erneut gestartet werden. Diese Zugmessung erfolgt unabhängig zu einer Messung mit der Messart **Zug**.




Für die Zugmessung muss der Minus-Anschluss der Differenzdruckmessung frei sein (Umgebungsdruck, nicht verschlossen).


- 4 Auf  bzw.  neben der Zug-Messwertanzeige tippen.
- 5 Messung beenden:  antippen.

### 14.2.2 Draught





For this type of measurement, the **Mean value calculation** option is also available. See **Mean value calculation** section.

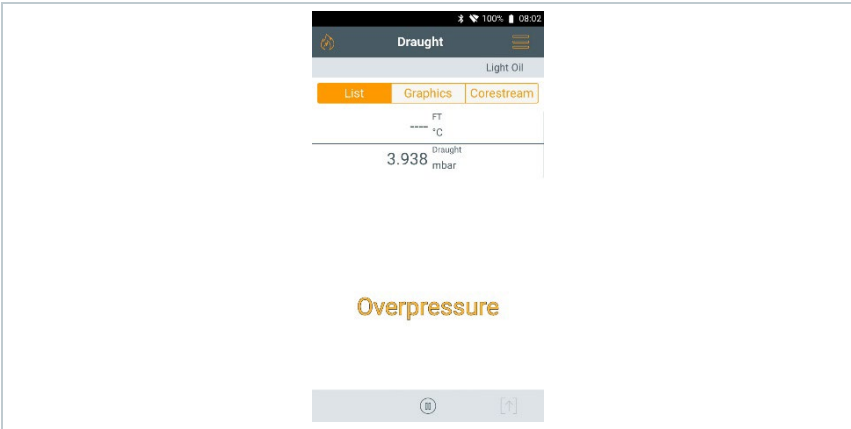- ✓ A flue gas probe must be connected.
- 1 Call up function:  | **Draught**



The minus connection for differential pressure measurements must be clear (ambient pressure, not closed).

- 2 | Start measurement: tap  .
  - ▶ Zeroing takes place. Please follow the instructions.
  - ▶ Reading is displayed.
- 3 | End measurement: tap  .

### 14.2.3 1st BlmSchV



- Do not operate the product if there are signs of damage on the housing, mains unit or connected cables.
- The product must be checked for any visible damage before commissioning.
- Do not store any solvents (e.g. isopropanol) or items containing solvents in the case, as the vapours can damage the sensors.



In the case of the 1st BlmSchV, the Smart Probe testo 915i (0563 3915) can be connected allowing the combustion air temperature to be measured in parallel.

- The measuring instrument has been tested according to the requirements of VDI 4206 part 1.
- The following fuels are approved for measurements according to the 1st BlmSchV:

## 14 Performing the measurement

---

Fuel	CO <sub>2</sub> max[vol.%]	O <sub>2</sub> base[%]	V <sub>AG</sub> trmin	V <sub>L</sub> min	A2	B
Natural gas	11.9	3.0	8.36	9.12	0.6600	0.0090
Fuel oil EL	15.4	3.0	10.53	11.26	0.6800	0.0070
LPG	13.7	3.0	23.80	25.95	0.6300	0.0080
Town gas	13.6	3.0	3.61	3.90	0.6300	0.0110
Briquettes	18.9	8.0	5.08	5.20	0.8330	0.0000
Lignite	19.8	8.0	4.01	4.09	0.9550	0.0000
Hard coal	20.5	8.0	7.81	7.82	0.7580	0.0000
Wood 15%w	20.3	13.0	3.87	3.93	0.6860	0.0096
Wood pellets	20.3	13.0	4.07	4.13	0.6200	0.0081

- For official measurements in accordance with the first German Federal Immission Control Ordinance (BImSchV), the measuring instrument must be checked every six months by a technical testing body of the Guild of Master Chimney Sweeps or another testing body recognised by the authorities.





To achieve usable measurement results, the measurement period for flue gas should be approx. 3 minutes and the measuring instrument should display stable measured values. Readiness for operation is achieved after a maximum of 10 minutes.

A qA mean value measurement can be carried out. For this purpose, the mean value is determined continuously over a period of 30 seconds, with the measuring cycle taking 1 second. The current mean values at the corresponding time of recording are displayed.

- ✓ A flue gas probe and a combustion air temperature probe or the Smart Probe testo 915i must be connected.

1 | Call up function:  | 1st BImSchV



- 2 Start measurement: tap .
- 3 Zeroing is carried out.
- 4 Position the flue gas probe in the core flow (area of the highest flue gas temperature). The display of the maximum measured flue gas temperature in the core flow helps when positioning the flue gas probe.
  - ▶ Measurement can be started as soon as the O<sub>2</sub> reading is below 20%.
- 5 tap .
  - ▶ The qA readings (O<sub>2</sub>, AT, VT) and the draught readings are determined (30 s).
  - ▶ The readings are automatically saved.

### 14.2.4 44th BImSchV



- Do not operate the product if there are signs of damage on the housing, mains unit or connected cables.
- The product must be checked for any visible damage before commissioning.
- Do not store any solvents (e.g. isopropanol) or items containing solvents in the case, as the vapours can damage the sensors.



In the case of the 44th BImSchV, the Smart Probe testo 915i (0563 3915) can be connected allowing the combustion air temperature to be measured in parallel.

## 14 Performing the measurement

---

- The measuring instrument has been tested according to the requirements of VDI 4206 part 1.
- The following fuels are approved for measurements according to the 44th BImSchV:

Fuel	CO <sub>2max</sub> [vol.%]	O <sub>2base</sub> [%]	V <sub>AG</sub> trmin	V <sub>Lmin</sub>	A2	B
Natural gas	11.9	3.0	8.36	9.12	0.6600	0.0090
Fuel oil EL	15.4	3.0	10.53	11.26	0.6800	0.0070
LPG	13.7	3.0	23.80	25.95	0.6300	0.0080
Town gas	13.6	3.0	3.61	3.90	0.6300	0.0110

- For official measurements in accordance with the 44th BImSchV, the measuring instrument must be checked every six months by a technical testing body of the Guild of Master Chimney Sweeps or another testing body recognised by the authorities.




To achieve usable measurement results, the measurement period for flue gas should be approx. 3 minutes and the measuring instrument should display stable measured values. Readiness for operation is achieved after a maximum of 10 minutes.



A qA mean value measurement can be carried out. For this purpose, the mean value is determined continuously over a period of 3 minutes, with the measuring cycle taking 1 second. The current mean values at the corresponding time of recording are displayed.

- ✓ A flue gas probe and a combustion air temperature probe or the Smart Probe testo 915i must be connected. An NO sensor must be installed.

1 Call up function:  | 44th BImSchV

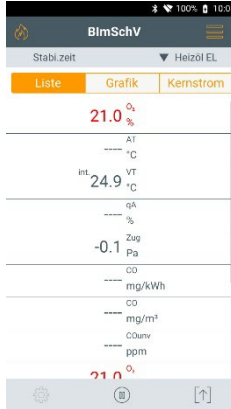



- 2 Start measurement: tap .
- 3 Zeroing is carried out.
- 4 Position the flue gas probe in the core flow (area of the highest flue gas temperature). The display of the maximum measured flue gas temperature in the core flow helps when positioning the flue gas probe.
  - ▶ Measurement (duration 3 min.) can be started as soon as of the O<sub>2</sub> reading is below 16%.
- 5 tap .
  - ▶ The qA readings (O<sub>2</sub>, FT, AT), draught reading, CO mean value and NO mean value are calculated (3 minutes).
  - ▶ The readings are automatically saved.
  - ▶ The measuring result is displayed after the measuring phase has been completed.



If the O<sub>2</sub> readings exceed 16% during the measurement, no mean values are displayed on the result screen.

### Abbreviations according to DIN EN VDI 4206 part 1

Formula symbol	Designation
CCO, B	Current CO concentration

Formula symbol	Designation
CNO <sub>x</sub> , B	Current NO <sub>x</sub> concentration
RO	Reference oxygen content
OEM	Measured oxygen volume content in dry flue gas
qA	Flue gas loss
tA	Flue gas temperature in °C
FT	Combustion air temperature in °C
UF	expanded uncertainty of flue gas loss
UCO, B	Expanded uncertainty of CO concentration converted to reference oxygen content
ECO, B	Result of CO concentration converted to reference oxygen content
UNO <sub>x</sub> , B	Expanded uncertainty of NO <sub>x</sub> concentration converted to reference oxygen content
RNO <sub>x</sub> ,B	Result of NO <sub>x</sub> concentration converted to reference oxygen content

## 14.2.5 Solid fuel measurement




For performing solid fuel measurements complying with the 1st BImSchV, a testo 300 NEXT LEVEL is required with the following equipment:



- CO sensor H<sub>2</sub>-compensated for measurements (measuring range for 1st BImSchV measurement min. 20,000 ppm)
- Measuring range extension by fresh air dilution
- Solid fuel adapter and probe shaft with pre-filter 0600 9765


1 | Call up function:  | **Flue Gas**

2 |  | **Options | Averaging | On**

3 | Zeroing is carried out.

▶ | The list for averaging opens.  
The start button changes to .

- 4 Confirm with .
- 5 Enter measuring time (15 min). The required value can be entered in the field.
- 6 Confirm with .
- 7 Insert the flue gas probe into the exhaust pipe and position it in the hot spot.

- 8
  - 1 Start averaging with .
  - ▶ Stability time starts.



Press **Continue** to end the stability time manually.

- ▶ After a maximum of 3 minutes, the stabilisation time ends and the measurement starts automatically.
- ▶ The system records the readings in the set measuring cycle. During the measurement, the readings and the calculated values are displayed.
  - ▶ Readings are automatically saved.
  - ▶ The measuring result is displayed after the measuring phase has been completed.

- 2 End measurement early: .

### 14.2.6 CO undiluted

- ✓ A multi-hole probe (0554 5762) must be connected.

- 1 Call up function:  | **CO undiluted**

- 2 Start measurement: tap .

- ▶ Reading is displayed.

- 3 End measurement: tap .

### 14.2.7 Smoke number





The **Smoke No.** and **Oil depos.** parameters are only available for oil fuels. The values calculated by a smoke tester can be entered.

#### Edit values

---



All values that can be modified have a dotted underlining.

- 1 | Call up function:  | **Smoke No.**
- 2 | Tap required value.
- ▶ | Keypad appears.
- 3 | Enter value.
- 4 | Confirm entry: tap ✓.
- 5 | Reset readings: tap .

### 14.2.8 Differential pressure



For this type of measurement, the **Averaging** option is also available. See **Averaging** section.



The differential pressure measurement can also be performed using the Smart Probe testo 510i (0560 1510).






Up to 4 testo 510i Smart Probes can be connected.

#### **WARNING**

##### **Dangerous mixture of gases! Danger of explosion!**

- Make sure there are no leaks between the sampling point and the measuring instrument.
- Do not smoke or use naked flames during the measurement.

- 
- ✓ | The gas pressure kit (0554 1203) must be connected. Alternatively, the Smart Probe testo 510i (0560 1510) can be used.

- ✓ For an instrument with no dilution option: The minus connection for differential pressure measurement must be depressurized at the start of the measurement (ambient pressure, instrument not connected to system being checked), since the pressure sensor is zeroed.
- 1 Call up function:  | **Differential pressure**
  - 2 Tap **Differential pressure**.
  - 3 Start measurement. Tap  .
    - ▶ Zeroing the pressure sensor.
    - ▶ Reading is displayed.
  - 4 End measurement: tap  .

### 14.2.9 Differential temp.





For this type of measurement, the **Averaging** option is also available. See **Averaging** section.




The measurement can also be carried out using Smart Probes. The following Smart Probes can be connected:  
testo 915i (0563 3915), testo 115i (0560 2115 02)



A differential temperature measurement can also be carried out with just one Smart Probe testo 915i. The measuring values (T1 and T2) for determining the differential temperature can be recorded by pressing the button on the Smart Probes testo 915i (<1 second).

- ✓ Two external temperature probes must be connected. Alternatively, wireless Smart Probes such as the testo 115i or testo 915i can be used. However, a maximum of just four Smart Probes can be used at the same time.
- 1 Call up function:  | **Differential temp.**
  - 2 Start measurement: tap  .
    - ▶ The measured values and the calculated differential temperature  $\Delta t$  (T1 - T2) are displayed.

3 | End measurement: tap .



**Automatic display after connection of several Smart Probe testo 115i or testo 915i during differential temperature measurement**


If several temperature probes are connected in total (external probes and/or testo 115i or testo 915i), the temperature probes are used for differential temperature measurement according to the following procedure.

Connected cable probe (maximum 1 possible)	Number of connected Smart Probes (testo 115i and/or testo 915i)	Display and use of the temperature probe by temperature channel
No	1	Temperature channel T1: t115i/915i dT is displayed.
Yes	-	Temperature channel T1: Cable probe (ext2): T2 and dT are displayed as "----".
Yes	1	Temperature channel T1: Cable probe (ext2): Temperature channel T2: t115i/915i: dT is displayed.
No	2	Temperature channel T1: t115i/915i Temperature channel T2: t115i/915i: dT is displayed.
Yes	2	Temperature channel T1: Cable probe (ext2): Temperature channel T2: t115i/915i: dT is displayed. Temperature channel T3: t115i/915i: T4 and dT are not displayed.
No	3	Temperature channel T1: t115i/915i Temperature channel T2: t115i/915i: dT is displayed. Temperature channel T3: t115i/915i: T4 and dT are not displayed.

Connected cable probe (maximum 1 possible)	Number of connected Smart Probes (testo 115i and/or testo 915i)	Display and use of the temperature probe by temperature channel
Yes	3	Temperature channel T1: Cable probe (ext2): Temperature channel T2: t115i/915i dT is displayed. Temperature channel T3: t115i/915i Temperature channel T4: t115i/915i dT is displayed.
No	4	Temperature channel T1: t115i/915i Temperature channel T2: t115i/915i dT is displayed. Temperature channel T3: t115i/915i Temperature channel T4: t115i/915i dT is displayed.
Yes	4	Temperature channel T1: Cable probe (ext2): Temperature channel T2: t115i/915i dT is displayed. Temperature channel T3: t115i/915i Temperature channel T4: t115i/915i dT is displayed. Temperature channel T5: t115i/915i

### 14.2.10 O<sub>2</sub> supply air

- ✓ An O<sub>2</sub> dual wall clearance probe (0632 1260) must be connected.
- 1 Call up function:  | **O<sub>2</sub> supply air**
- 2 Start measurement: tap .
- ▶ Reading is displayed.

- 4 End measurement: tap .

### 14.2.11 Gas flow




---



The function is only available if the chosen fuel is a gas.

---

The gas burner capacity is calculated by means of the gas amount consumed. To this end, a gas amount is input and its consumption read out at the gas meter.

- 1 Call up function:  | **Gas Flow**
- 2 Set the gas amount to watch for at the gas meter.
- 3 Set the calorific value of the burnt gas.
- 4 Start measurement: tap .
- ▶ The test time is displayed.
- 5 When the set gas amount is reached: tap .
- ▶ The calculated gas flow and the gas burner capacity (in KW) are displayed.

#### Edit values

---



All values that can be modified have a dotted underlining.

---

### 14.2.12 Oil flow rate


---



The function is only available if the chosen fuel is an oil.

---

This function is used to calculate the capacity of the burner from the set oil pressure and the oil flow rate of the oil nozzle.

- 1 Call up function:  | **Oil flow rate**
- 2 Set oil flow rate of the oil nozzle and oil pressure.
- ▶ The calculated oil burner capacity is displayed (in KW).



**Edit values**

All values that can be modified have a dotted underlining.

**14.2.13 CO ambient**


- Cigarette smoke influences the measurement by more than 50 ppm. The breath of a smoker influences the measurement by about 5 ppm.
- When using an ambient CO probe, note that:  
The direction of flow of the gas has an effect on the accuracy of measurement. Frontal flow onto the sensor leads to higher readings. The best measurement results are achieved when the probe is moved gently backwards and forwards.
- When using the ambient CO probe and the flue gas probe, note that:  
The probe must be in the fresh air (CO-free) during the zeroing phase.



For this type of measurement, the **Mean value calculation** option is also available. See **Mean value calculation** section.

✓ An ambient CO probe (0632 1272) must be connected.

1 Call up function:  | **CO Ambient**

2 Start measurement: tap .

▶ Reading is displayed.

3 End measurement: tap .

**14.2.14 Tightness test 1**

The tightness test 1 (using air or inert gas such as CO<sub>2</sub> or N<sub>2</sub>) is a tightness test for pipes, including fittings, but without gas appliances and the relevant regulating and safety devices. The tightness test 1 is carried out after a load test has been successfully completed on newly laid gas pipes, or after renovation of existing gas pipes, and is used for the acceptance of these pipes. It shows up even the smallest leaks in gas pipes.



According to DVGW TRGI 2018 and ÖVGW G10, the stabilization time and test time depend on the pipe volume.

- Pipe volume < 100 l: Adjustment time 10 min, test time 10 min.

## 14 Performing the measurement

---

- Pipe volume > 100 l to < 200 l: Adjustment time 30 min, test time 20 min.
  - Pipe volume > 200 l: Adjustment time 60 min, test time 30 min.
- 

- > Connect the connector plug of the hose pressure connection kit (0554 1203) to the pressure test kit (0554 1213). Insert the pressure adapter into the flue gas socket and lock by slightly turning it clockwise (bayonet fitting).

### Carrying out the measurement

- ✓ The pressure socket of the instrument must be free (depressurized, not closed).

- ✓ Pressure zeroing has been carried out.

- 1 Call up function:  | **Tightness test 1.**

- 2 Set parameters or enter values.



All values that can be modified have a dotted underlining.

---

- 3 Pressurize the system.



Once the pressure has built up, a stabilization time specified by DVGW-TRGI 2018 should be observed to ensure that any possible pressure fluctuations are not recorded in the measurement as well. The relevant standard provides more detailed information.


---

- 4 Start stabilization time: tap . If applicable, follow instructions.

- ▶ Reading is displayed.

- ▶ Stabilization time is finished.



End stabilization time early: tap .

---

- ▶ Measuring time starts.

- ▶ The readings are automatically saved and displayed after the measurement has been completed.

- 5 The measuring value result can be assessed.

- 6 | Conclude measurement: tap **Next**.
- 7 | If applicable, repeat measurement: tap ↻.

## 14.2.15 Serviceability

This measurement is carried out to test the serviceability of an existing gas pipe system (in contrast to the load test and tightness test 1) and is used to check the actual condition of the pipes. The pipe system may be in operation or disused.



Adhere to DVGW-TRGI 2018, worksheet G624!

Absolute pressure (parameter of the measuring location) must be entered to obtain correct readings. If this is not known, it is advisable to use the value 966 hPa (corresponds to 1013 hPa barometric, 400 m above sea level).



The testo 300 NEXT LEVEL is not certified according to DVGW G5952; therefore, no serviceability test according to DVGW-TRGI 2018 may be carried out with this instrument. We recommend testo 324 for this measurement, which has been tested and certified in line with DVGW G5952 by DVGW Karlsruhe and also according to the ÖVGW Guideline 1/2.

- > | Insert the connector plug of the hose pressure connection kit (0554 1203) into the flue gas socket and lock it in place by turning it slightly clockwise (bayonet fitting).

### Carrying out the measurement

- ✓ | The pressure socket of the instrument must be free (depressurized, not closed).
- ▶ | Pressure zeroing has been carried out.
- 1 | Call up function: 🔥 | **Tightness test 2**
- 2 | Set parameters or enter values.




All values that can be modified have a dotted underlining.







Three circle diameters and three pipe lengths can be entered, which are then used to calculate three partial volumes. The pipe volume is calculated by adding these three partial volumes.

- 3 | Pressurize the system.

- 4 Start stabilization time. Tap . If applicable, follow instructions.
  - ▶ Reading is displayed.
  - ▶ Stabilization time is finished.

---


 End stabilization time early: tap .

---
- 5 End measurement: tap .
  - ▶ Measuring time starts.
  - ▶ The readings are automatically saved and displayed after the measurement has been completed.
- 6 The measuring value result can be assessed.
- 7 Conclude measurement: Tap **Next**.
- 8 If applicable, repeat measurement: tap .


### 14.2.16 Let by test


- ▶ Insert the connector plug of the hose connection kit (0554 1203) into the flue gas socket and lock it in place by turning it slightly clockwise (bayonet fitting).




#### Carrying out the measurement

- ✓ The pressure socket of the instrument must be free (depressurized, not closed).
  - ✓ Pressure zeroing has been carried out.
- 1 Call up function:  | **Let By Test**.
  - 2 Set parameters or enter values.

---

 All values that can be modified have a dotted underlining.



---
  - 3 Start stabilization time: tap . If applicable, follow instructions.

- ▶ Reading is displayed.
  - ▶ Stabilization time is finished.
- 
-  End stabilization time early: tap .
- 
- ▶ Measuring time starts.
  - ▶ The readings are automatically saved and displayed after the measurement has been completed.
- 4 The measuring value result can be assessed.
  - 5 Conclude measurement: tap **Next**.
  - 6 If applicable, repeat measurement: tap .

### 14.2.17 4 Pa measurement



The 4 Pa measurement is only available with instruments that have the **dilution** option available.

- 1 Call up function:  | **4 Pa measurement**
  - 2 Set parameters or enter values.
- 
-  All values that can be modified have a dotted underlining.
- 
- 3 Connect adapter 0554 1203, hose connection kit and capillary hoses 0554 1215 as shown in the illustration.
  - 4 Tap **Next**.
- ▶ Hose test is started.
- 5 Tap **Next**.
- ▶ Measurement starts.
  - ▶ Readings and measuring time are displayed.



Follow the notes in the display.

- ▶ The readings are automatically saved and displayed after the measurement has been completed.

6 End measurement early: tap .

### **Guidelines for the qualification test for differential pressure measuring instruments for the measurement of underpressures in rooms where firing installations are set up**

These guidelines were created by the ZIV (Guild of Master Chimney Sweeps) in collaboration with differential pressure measuring instrument manufacturers, the TÜV SÜD Industrie Service GmbH test centre, firing and heat technology, and the DVGW (German Technical and Scientific Association for Gas and Water).

Areas of application and purpose:

Firing installations which are dependent on indoor air must not be set up in rooms with air extraction equipment. However, insofar as no dangerous underpressure can arise while the firing installations are in operation, derogations are possible. An underpressure of more than 4 Pa should be regarded as dangerous when operating firing installations which are dependent on indoor air. When operating tested firing installations which are not dependent on indoor air for solid fuels, as a rule an underpressure of more than 8 Pa is not permissible (see proof of usability e.g. general building approval for the firing installation). These test guidelines apply to differential pressure measuring instruments for determining the underpressure in rooms where firing installations are set up and is aimed at the manufacturers of these kinds of measuring instruments. They set out requirements for construction and minimum requirements for the performance characteristics of relevant measurement and inspection equipment in the area of underpressure measurement, along with specifications for carrying out qualification tests.

Description of typical measuring principles:

With an instrument that has been tested according to these guidelines, it is possible to check an underpressure limit value of 4 Pa, or of 8 Pa for firing installations which are not dependent on indoor air, in the equipment room, and to show the time progression over a period of at least 3 minutes in a diagram on the display, or to print it out, and evaluate it. Two flexible capillary hoses of the same length enable the differential pressure between the equipment room and a reference point that is pneumatically disconnected from the combustion air network (outside air, stairwell) to be recorded and conveyed to a pressure sensor.

The capillaries can be routed both outside through the window sealing and to the stairwell through the door rebate or the keyhole. The second capillary hose remains in full in the equipment room.

Procedure for an underpressure measurement in equipment rooms:

Firing installations which are dependent on indoor air must not be set up in rooms with air extraction equipment. However, insofar as no dangerous underpressure can arise while the firing installations are in operation, derogations are possible. An underpressure of more than 4 Pa should be regarded as dangerous when operating firing installations which are dependent on indoor air. When operating tested firing installations which are not dependent on indoor air for solid fuels, as a rule an underpressure of more than 8 Pa is not permissible (see proof of usability e.g. general building approval for the firing installation).

The proof can be provided through different measures. These for instance include the installation of a window tilt switch, the installation of an underpressure monitor or proof by means of measuring technology that with simultaneous operation of the fire installation(s) and indoor air extraction system(s), no dangerous underpressure can arise.

The question as to which measure may give the desired result essentially depends on the local conditions. These are for instance the leaktightness of the building shell, the size of the usage unit, the presence or leaktightness of the communicating doors and the quantity of air which is extracted from the usage unit by the indoor air extraction systems.

It can be assumed that, with effective fume hood systems, at least 400 m<sup>3</sup>/h of air are extracted (with exhaust air driers the quantity of air is not significantly below this, very powerful fume hood systems extract over 1000 m<sup>3</sup>/h of air). With very high air extraction performances, an underpressure measurement is frequently not expedient in apartments or comparable usage units.

As a rule, the solution here can simply be an opening to the outside, so for example a tilted window with a window tilt switch. In a case of this kind, the measurement only makes sense if the owner/operator of the firing installation is absolutely intent on having the proof of the underpressure being too high.

The area of application of underpressure measurement in equipment rooms is therefore primarily where the power of the indoor air extraction systems is estimated to be low or there are particular physical conditions which suggest that the underpressure does not exceed the permissible value (4 or 8 Pa) when the firing installation(s) and indoor air extraction system(s) are operated together.

The check that no dangerous underpressure can arise should be carried out using pressure measuring instruments that have undergone qualification testing for the "measurement of underpressures in rooms where firing installations are set up".

The measurement is carried out according to the following process outline:

1. Close all the usage unit's windows and doors. If there are blinds present on the windows and external doors, these should also be closed. Switch differential pressure measuring instrument on and wait for the zero point to be determined, connect capillary hoses to the measuring instrument (reference = (-) connection, equipment room = (+) connection), open

## 14 Performing the measurement

---

windows, and if applicable blinds, and lay external capillary hose (for reference pressure), check zero point on the reading display, start pressure progression recording, wait approx. 30 seconds with open window or external door to register zero line.

2. Start up firing installation(s) and set to maximum power. For manually loaded firing installations for solid fuels, full load operation must be achieved. All available air extraction equipment should be started up. The process must involve the measurement recording the most unfavourable condition, that is the evaluation should be carried out with the air extraction system(s) at the highest level of power. In cases where the ventilation equipment is not located in the same room as the firing installation, all doors and openings between the room where the firing installation is set up and the ventilation equipment are to be kept open. The zero point should not change after starting up the firing installation and air extraction equipment with the window or external door of the equipment room open.
3. Close door/window, wait approx. 30 seconds, check underpressure, check clean extraction of the flue gases. If a blind is present on the window/external door of the equipment room, this should be closed and opened at the same time in each case.
4. Open door/window, wait approx. 30 seconds, zero line must be reached again.
5. Close door/window, wait approx. 30 seconds, check underpressure, check clean extraction of the flue gases.
6. Open door/window, wait approx. 30 seconds, zero line must be reached again.
7. Close door/window, wait approx. 30 seconds, check underpressure, check clean extraction of the flue gases.

After the measurement, the result can be printed out and evaluated. If the underpressure in the room where the firing installation(s) is/are set up is constantly below 4 Pa, or with tested firing installations for solid fuels that are not dependent on indoor air below the maximum permissible underpressure specified in the proof of usability (currently 8 Pa in principle), then the safe simultaneous operation of the firing installation and air extraction system(s) is possible.

Careful execution of the measurement in accordance with the steps listed above enables a correct evaluation and rating of the safe operation of the firing installation(s) and indoor air extraction system(s).


The measurement result represents the evaluation of the current status, taking into account the devices available for the test and influencing the result (combustion plants and air extraction system(s)) and the condition of the building (e.g. windows and doors). A new evaluation is required when there is a change to the firing installation, to any other devices that have an influence or to the building.



Repeat checks:



Flawless operation of the instrument, the fine pressure probe and the capillary hoses must be determined by regular checks once every six months at a technical test centre of the Guild of Master Chimney Sweeps.
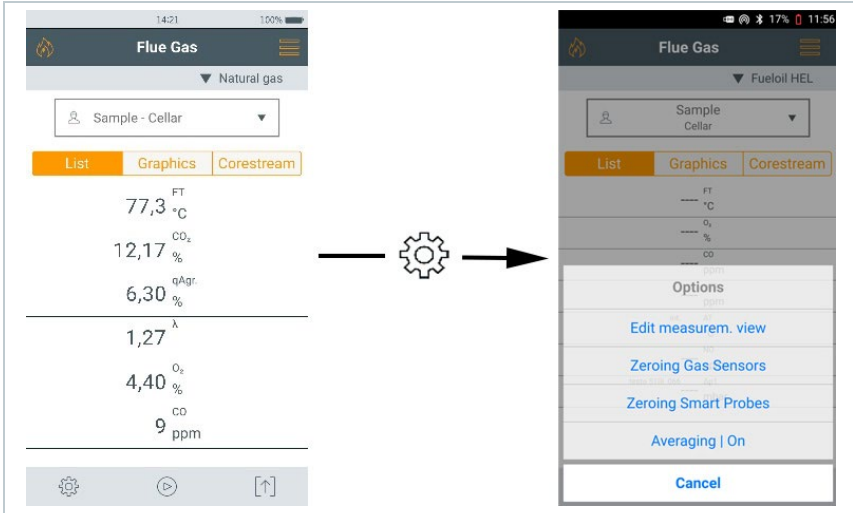
## 14.3 Overview of options ( )




Options	Description
<b>Edit measur. view</b>	Add (add), delete (del) measurement parameters, change display sequences (≡) and units (click on (Unit)).
<b>Zeroing Gas Sensors</b>	Manually zeroing gas sensors.  Menu is only available for measurements with gas sensors.
<b>Zeroing Smart Probes</b>	Zero the differential pressure Smart Probe.  The menu is only available for measurements with the Smart Probe testo 510i.
<b>Averaging   On</b>	Calculation of a mean value within a preset time.



### 14.3.1.1 Edit view

- 1 | Call up function:  | **Options** | **Edit View**

▶ **Edit View** menu is opened.
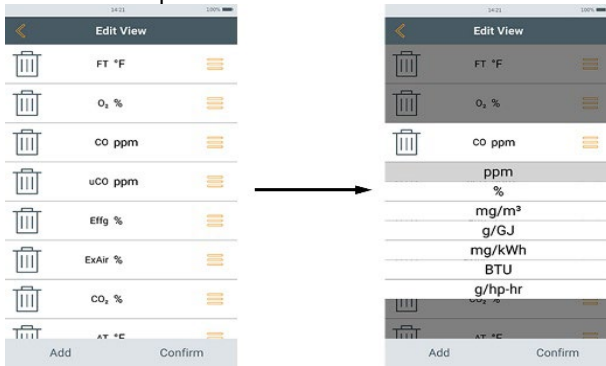
## 2 Measurement parameter



- **Add:** tap **Add** to open selection list of measurement parameters.
- **Delete:** tap on .
- **Edit unit:** tap on the measurement parameter you want to edit. Tap on the required measurement unit in the selection list that has been opened.
- Change position in the list: Press and hold  and drag to the required position.
- Accept changes: tap **Confirm**.

### Selection list (example: Country version Germany)

The overview of measurement parameters (available selection depends on the chosen measurement type, fuel set and the sensors available in the measuring instrument):

Display	Measurement parameter
FT	Flue gas temperature
AT	Combustion air temperature
Itemp	Instrument temperature
Pump	Pump performance
O2	Oxygen
CO2	Carbon dioxide
qAnet	Flue gas loss without consideration of the calorific value range

Display	Measurement parameter
Effn	Efficiency without consideration of the heat value range
qAgr.	Flue gas loss with consideration of the calorific value range
Effg	Efficiency with consideration of the calorific value range
Draught	Flue draught
$\Delta P$	Differential pressure
CO	Carbon monoxide
uCO	Undiluted carbon monoxide
NO	Nitrogen monoxide
NOx	Nitrogen oxides
$\lambda$	Fuel-air ratio
AmbCO	Ambient carbon monoxide
O2ref	Oxygen reference
$\Delta T$	Differential temperature
Dew Pt	Flue gas dewpoint temperature
Smoke 1	
Smoke 2	
Smoke 3	
Smokenumber Ø	



Only those measurement parameters and units that are enabled in the reading display appear in the reading display, in the saved measurement protocols and on the report printouts.



The settings only apply to the measurement type currently enabled.

### 14.3.2 Zeroing Gas Sensors

Zeroing of the gas sensors can be started manually.

>  | **Zeroing Gas Sensors**

- ▶ The gas sensors are zeroed.



**testo 300 NEXT LEVEL without probe zeroing option in the flue gas:**

The flue gas probe must be in fresh air during the zeroing phase (30 seconds)!

**testo 300 NEXT LEVEL with probe zeroing option in the flue gas:**

The flue gas probe may already be in the flue gas duct during the zeroing phase (30 seconds).

---

### 14.3.3 Mean value calculation

---








The mean value calculation option is only available in the country versions x, y, z...


---




The mean value calculation option can only be set for the following measurement types: **Flue gas**, **Draught**, **Differential pressure**, **Differential temperature** and **CO Ambient**.


---

- 1 | Select required measurement type.
- 2 | Call up function:  | **Options | Mean value calculation | On**
  - ▶ The list for mean value calculation is opened.
  - ▶ The start button changes to .
- 3 | Determine the measuring rate (1 sec - 120 sec). The required value can be entered directly in the field on the first two lines of the display.
- 4 | Confirm with .
- 5 | Determine the measuring time (30 sec - 90 min). The required value can be entered in the field.
- 6 | Confirm with .
- 7 | Start mean value calculation with 
  - ▶
    - Stabilization time begins. It can be terminated manually by selecting **Next**.

- After a maximum of 3 minutes, the stabilization time ends and the measurement starts automatically.
- The system records the readings in the set measuring cycle.
- During the measurement, the readings and the calculated values are displayed.
- End measurement early: .
- Readings are automatically saved.
- The measurement result is displayed.

8 Carry out another measurement: .

## 14.4 Overview of protocols ( )

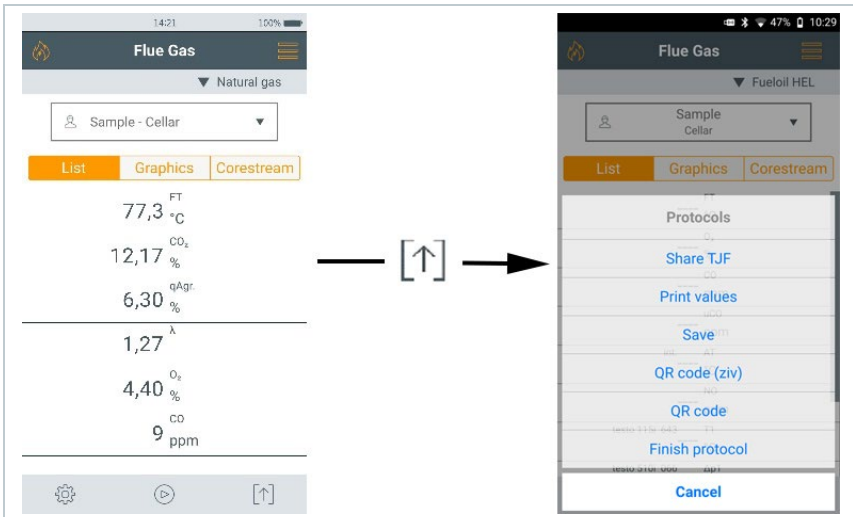

Protocols	Feature
<b>Print values</b>	Print out measuring values via Bluetooth®.
<b>Save</b>	Save measuring values, including selected customers/measuring sites. Saved measuring values can be retrieved in the main menu.

Protocols	Feature
<b>Finish protocol</b>	Create, save and send measurement report, including <ul style="list-style-type: none"><li>- <b>Own company data</b></li><li>- <b>Format and print</b></li><li>- <b>Customer data</b></li><li>- <b>Comments and pictures</b></li><li>- <b>Select measurements</b></li><li>- <b>Signature</b></li></ul> Saved reports can be retrieved in the main menu.
<b>Share</b>	Transfer to external software <ul style="list-style-type: none"><li>- via QR Code</li><li>- share TJF file</li></ul>


### 14.4.1 Print data

The current readings are printed via a Bluetooth® printer (accessories: Testo printer 0554 0621).

#### Carry out print text settings

Print text settings can be carried out and the reading printout can be supplemented with individual creator information (header: company address; footer: name of technician), see Section 8.2.5.4 **Own company address**.

#### Print current readings

- ✓ The printer is switched on and within wireless range.
- 1 tap .
- ▶ **Protocols** menu is opened.
- 2 Tap **Print values**.
- ▶ The protocol is created and sent to the printer.
- ▶ The protocol is printed.



Bluetooth® is always activated on the testo 300 NEXT LEVEL.

### 14.4.2 Save

The measurement data from the last measurement carried out of each measurement type is saved on the measuring instrument.

Measurements that have been carried out can be saved to back up the measurement data and for the subsequent creation of a report:

- 1 | tap .
- ▶ **Protocols** menu is opened.
- 2 | Tap **Save**.
- ▶ The measurement protocol is saved.



Only saved readings can be further processed at a later stage for a report.









The readings are automatically saved for the following measurement types:

- Tightness test 1
- Tightness test 2
- Let by test
- 4 Pa measurement (DE country version)
- First German Federal Immission Control Ordinance (BImSchV) (DE country version)
- Averaging (IT country version)

---


### 14.4.3 Finish protocol


- 1 | tap .
- ▶ **Protocols** menu is opened.
- 2 | Tap **Finish protocol**.
- ▶ Options for **Protocols** are opened.
- 3 | Enter/select log data:

 
Category	Description
<b>Format and print</b>	Select output format(s): <ul style="list-style-type: none"> <li>- <b>CSV</b> (comma separated text file, e.g. for Microsoft® Excel),</li> <li>- <b>PDF</b></li> <li>- <b>QR</b> (global interface for third party software)</li> <li>- <b>QR_ZIV</b> (interface complying with the regulations of the 'Federal Association of the Chimney Sweeps in Germany')</li> <li>- <b>ZIV</b> (XML file, complying with the regulations of the Federal Association of Chimney Sweeps in Germany).</li> </ul>
<b>Customer data</b>	Enter contact details
<b>Comments and pictures</b>	Enter comments and <b>add</b> pictures.
<b>Select measurements</b>	<p>All saved measurements are displayed in one of the following time categories, depending on the creation date: <b>Today</b>, <b>Yesterday</b> or <b>Older</b>.</p> <p>The measurements selected to create the report are identified with .</p> <p>Recently saved measurements for these customers are automatically identified.</p> <p>To display saved readings to check them:</p> <ul style="list-style-type: none"> <li>➤ .</li> </ul> <p>To delete individual measurement:</p> <ul style="list-style-type: none"> <li>➤ .</li> </ul> <p>To delete all measurements of a time category:</p> <ul style="list-style-type: none"> <li>➤ tap  next to the time category name.</li> </ul> <p>To select/deselect a measurement for the report:</p> <ul style="list-style-type: none"> <li>➤ .</li> </ul>
<b>Signature</b>	Tap <b>Sign Report</b> and sign. Options: <b>Abort</b> , <b>Reset</b> and <b>Save</b>




4

Print values: tap .

To save readings: tap .

Save and send report: tap .

Generate QR code: tap .

# 15 Maintenance

## 15.1 Service



Testo recommends an annual check of the testo 300 NEXT LEVEL; this can be carried out by a Testo-authorized service centre. Please contact Testo at <http://www.testo.com> for more information.

---

## 15.2 Calibration



The measuring instrument is supplied with a calibration protocol as standard. To maintain the specified accuracy of measurement results, Testo recommends an annual check of the testo 300 NEXT LEVEL by a Testo-authorized service centre.

Please contact Testo at <http://www.testo.com> for more information.

---

## 15.3 Check instrument status

### 15.3.1 Sensor diagnosis

The status of the sensors can be displayed.

To replace expended sensors, see Section "Replace sensors".

Call up function:  | **Sensor Diagnosis**

- ▶ Sensor diagnosis is displayed.
- 



A sensor is able to recover. It is therefore possible for the sensor status display to change from **not OK** to **OK**.

---

### 15.3.2 Error list

Instrument errors that have not yet been rectified can be displayed.

Call up function:  | **Error list**

- ▶ Error list is displayed if there are errors present.
- 

## 15.4 Clean the measuring instrument

- > If the housing of the measuring instrument is dirty, clean it with a damp cloth.
- 



Use distilled water or a weak solvent to clean the flue gas analyzer.

---

**IMPORTANT****Leaking solvents and degreasers!****Damage to the instrument and sensors!**

The following substances can cause damage to the device or the sensors:

- Solvent-containing vapours such as those contained in cleaning agents, degreasers, wax polishes and adhesives
- Formaldehyde

Do not store cleaning cloths, solvents and degreasers, such as isopropanol, in the case.

**IMPORTANT****Strong or harsh alcohol or brake cleaner!****Damage to the instrument!**

- Do not use any strong or harsh alcohol or brake cleaner.

## 15.5 Drain condensate container

The fill level of the condensate container can be read from the markings. Hold the instrument horizontally or vertically to check the fill level.

**⚠ CAUTION****Weak mix of acids in the condensate!****Minor injuries!**

- Avoid skin contact.
- Make sure that the condensate does not run over the housing.

**⚠ CAUTION****Condensate entering the gas path!****Damage to sensors and flue gas pump!**

- Do not empty condensate container while the flue gas pump is in operation.

- 1 Open the condensate outlet on the condensate container.



- 2 Let the condensate run out into a sink



- 3 - Wipe off any drops still on the condensate outlet with a cloth and close the condensate outlet.



The condensate outlet must be completely closed, otherwise incorrect measurements could occur due to infiltration of external air.

## 15.6 Open the measuring instrument

Only open the measuring instrument when this is required for maintenance purposes (replacing gas sensors).

- ✓ The measuring instrument must not be connected to a mains socket via the mains unit. The measuring instrument must be switched off.



When opening/assembling the instrument, take care not to lose any screws that have been removed. It is advisable to place a cloth on the work surface.

- 1 Place the instrument on its front so that the back is facing upwards.

- 2 Using a torx screwdriver (size T 10), remove both housing screws on the top of the instrument.




### ATTENTION


**The instrument may be damaged by incorrect removal of the housing screws!**

- Only remove the two housing screws on the top of the instrument. The other four screws must be left as they are.

- 3 Unlock the operating module in the direction of the arrow.

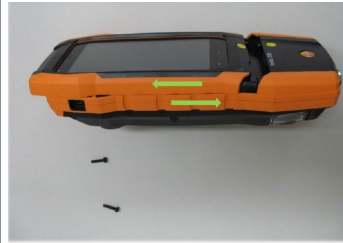

- 4 Remove the operating module.
- 5 Place the instrument on its front again.
- 6 Remove the remaining four screws on the back of the instrument.
- 7 Lift off the back of the instrument.

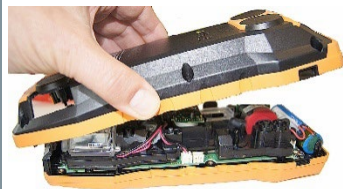

### Assembly



Perform in reverse order to assemble. Please note:


- Lay hoses and lines in the guides intended for this purpose.
- Make sure that hoses and lines do not get jammed.

## 15.7 Replace sensors



A slot bridge (0192 1552) must be inserted in slots which are not equipped with a sensor. Used sensors must be disposed of as hazardous waste!

Available slots:

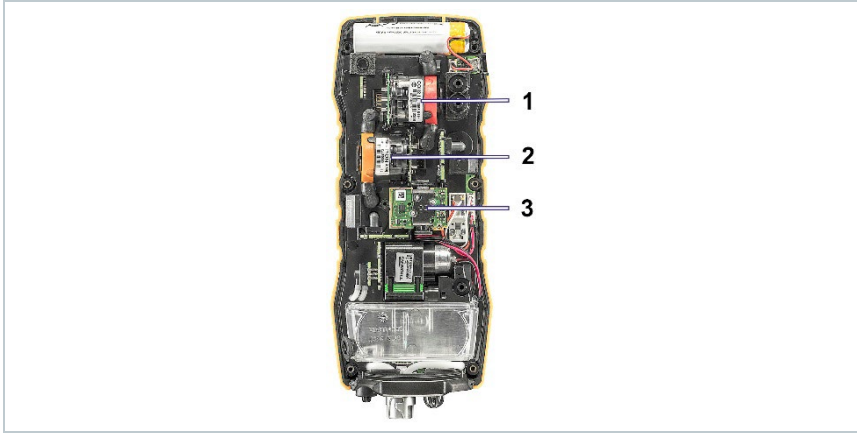

1	CO sensor or COlow sensor	3	O2 sensor
2	NO sensor or NOlow sensor		



When retrofitting a sensor, the associated measurement parameter/unit must be enabled in the reading display.

## 15.8 Replace O2 sensor

**⚠ CAUTION**


**Acid in the sensors.  
May cause chemical burns.**

- Do not open the sensors.
- Always wear gloves when changing a sensor.  
 Eye contact: Rinse the affected eye thoroughly under running water for 10 minutes, keeping the eyelids wide open and protecting the unaffected eye. Remove contact lenses wherever possible.




Measuring instrument is open, see Section **Open measuring instrument**.


- 1 Unlock retaining bracket and open out.

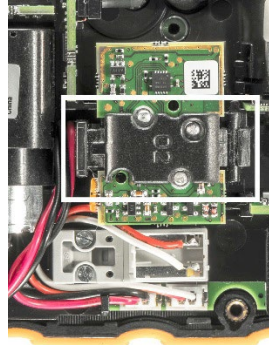

- 2 Remove faulty sensor from the slot.

- 3 Insert new sensor in the slot.

-  Make sure that the socket on the sensor circuit board is correctly connected to the contact plug.

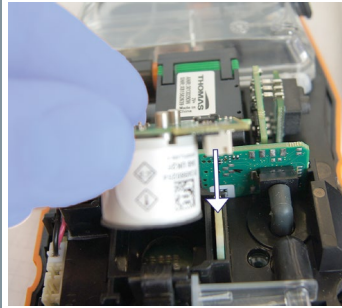

- 4 Close the retaining bracket with an audible "click".
- 5 Close the measuring instrument.



After replacing an O2 sensor, wait for an acclimatization time of 15 min to elapse before using the instrument.



When replacing an O2 sensor and when there is an interruption of the power supply for more than 10 hours, we recommend an acclimatization time of 1 hour for compliance with measuring accuracy.

## 15.8.1 Change CO, CO H2 and NO sensor

**⚠ CAUTION**

**Acid in the sensors.  
May cause chemical burns.**


- Do not open the sensors.
- Always wear gloves when changing a sensor.  
Eye contact: Rinse the affected eye thoroughly under running water for 10 minutes, keeping the eyelids wide open and protecting the unaffected eye. Remove contact lenses wherever possible.

✓ Measuring instrument is open, see Section **Open measuring instrument**.

1 Remove faulty sensor and hose connections from the slot.



2 Remove hose connections from the faulty sensor/bridge.

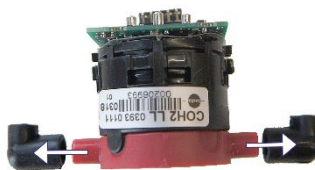

For NO sensor: Remove auxiliary circuit board.

Do not remove the auxiliary circuit board of the NO sensor until immediately before installation. Do not leave the sensor without auxiliary circuit board for longer than 15 minutes.

3 Fit the hose connections onto the new sensor.

4 Fit new sensor into the slot and at the same time fit the hose connections onto the gas path connections.





Make sure that the socket on the sensor circuit board is correctly connected to the contact plug.

- 5 Close the measuring instrument.

## 15.9 Clean modular flue gas probe

- ✓ Disconnect flue gas probe from the measuring instrument.
- 1 Release probe catch by pressing the key on the probe handle and remove probe module.

- 2 Blow compressed air through flue gas ducts of the probe module and probe handle (see illustration). Do not use a brush!



- 3 Fit probe module onto the probe handle and click into place.

## 15.10 Replace the probe module

- ✓ Disconnect the flue gas probe from the measuring instrument.
- 1 Press the key on the top of the probe handle and remove the probe module.



- 2 Fit new probe module and click into place.

## 15.11 Check/replace particle filter

### Check particle filter

- Particle filters of the modular flue gas probe must be checked regularly for contamination: check visually by looking through the window of the filter chamber.
- If there is visible contamination or inadequate pump flow, replace the filter.

### Replace particle filter



The filter chamber may contain condensate. This is not a malfunction and will not cause incorrect readings.

- 1 Open filter chamber: turn slightly anti-clockwise.



- 2 Remove filter chamber.



- 3 Remove filter plate and replace it with a new one (0554 3385).




- 4 Attach the filter chamber and lock it: turn slightly clockwise.



## 15.12 Replace thermocouple

- 1 Release probe catch by pressing the key on the probe handle and remove probe module.
- 2 Remove thermocouple plug-in head from the socket using a screwdriver and pull thermocouple out of the probe shaft.
- 3 Insert new thermocouple into the probe shaft until the plug-in head clicks into place.
- 4 Fit probe module onto the probe handle and click into place.

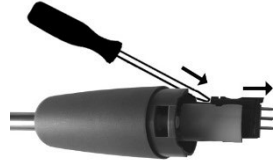

# 16 Technical data

Technical data for testo 300 NEXT LEVEL

Feature	Value
Temperature measuring instrument	-40 to +1200 °C
Draught measurement	-9.99 to +40 hPa
Pressure measurement	-100 to 200 hPa
O <sub>2</sub> measurement	0 to 21 vol.%
CO measurement	0 to 4,000 ppm
Option: CO measurement (H <sub>2</sub> -compensated)	0 to 8,000 ppm
Option: CO measurement (H <sub>2</sub> -compensated: COlow sensor)	0 to 500 ppm
Option: CO measurement with activated fresh air dilution/measuring range extension	0 to 15,000 ppm
Option: CO measurement (H <sub>2</sub> -compensated) with activated fresh air dilution/measuring range extension	0 to 30,000 ppm  1st BimSchV, measurement 20,000 ppm
Option: NO measurement	0 to 3,000 ppm
Option: NO Measurement with NOlow sensor	0 to 300 ppm
Efficiency testing (Eta)	0 to 120%
Flue gas losses	0 to 99.9%
CO <sub>2</sub> determination (calculation from O <sub>2</sub> )	Display range 0 to CO <sub>2</sub> max.
Ambient CO measurement (internal/flue gas probe)	0 to 2,000 ppm
Ambient CO measurement (external with CO probe)	0 to 500 ppm
Service life O <sub>2</sub> sensor	Up to 72 months depending on load
Service life CO sensor	Up to 72 months depending on load
Service life NO sensor	Up to 72 months depending on load
Service life COlow sensor	Up to 72 months depending on load
Service life NOlow sensor	Up to 72 months depending on load

## General technical data

Feature	Value
Storage temperature	-20 to +50°C
Operating temperature	-5 to +45°C
Charging temperature	-0 to +45°C

Feature	Value
Energy storage unit	3.6 V/3.5 Ah
Mains unit	5 V / 1 A
Humidity application range	15 to 90% RH, non-condensing
Power supply	Energy storage unit, USB mains unit
Energy storage unit service life	10 hrs
Lifetime energy storage	> 1000 charging cycles / approx. 5 years
Protection class	IP 40
Memory	1 million measuring values
Display	5.0" touch display, HD 1280x720 pixels
Weight	Approx. 800 g
Dimensions	L: 244 mm (including probe connection) H: 59 mm W: 98 mm.
Certification	TÜV-tested according to 1st German Federal Immission Control Ordinance (BImSchV) EN 50379, Parts 1-3

### Technical data for testo 915i

Feature	Value
Battery type	3 x micro batteries AAA
Battery life	150 h at +25 °C and measurement cycle 1 s
Data transmission	Bluetooth®
Wireless range	Up to 100 m with no obstructions
Operating temperature	-20 to +50 °C
Storage temperature	-20 to +60 °C
Protection class	IP 40
Measuring range	-50 to +400 °C
Accuracy	±1.0 °C
Solution	0.1 °C
Dimensions	Handle: 129 x 31 x 31 mm Probe: length 99 mm/diameter 4 mm
Power indicator	3-colour LED (orange/red/green)
Measurement/connection cycle	1 s
Auto Off	After 10 minutes without Bluetooth® connection

**Technical data for testo 510i**

Feature	Value
Battery type	3 x micro batteries AAA
Battery life	150 h at +25 °C and measurement cycle 2 s
Data transmission	Bluetooth®
Wireless range	Up to 100 m with no obstructions
Operating temperature	-20 to +50 °C
Storage temperature	-20 to +60 °C
Measuring range	-150 to +150 hPa
Accuracy	±0.05 hPa (0 to +1 hPa) ±0.2 hPa + 1.5% of m.v. (+1 to +150 hPa)
Solution	0.01 hPa
Dimensions	148 x 36 x 23 mm
Function indicator	3-colour LED (orange/red/green)
Measurement/connection cycle	2 s
Auto Off	After 10 minutes without Bluetooth® connection

**Technical data for testo 115i**

Feature	Value
Battery type	3 x micro batteries AAA
Battery life	150 h at +25 °C and measurement cycle 1 s
Data transmission	Bluetooth®
Wireless range	Up to 100 m with no obstructions
Operating temperature	-20 to +50 °C
Storage temperature	-20 to +60 °C
Measuring range	-40 to +150 °C
Accuracy	±1.3 °C
Solution	0.1 °C
Dimensions	183 mm x 90 mm x 30 mm
Power indicator	3-colour LED (orange/red/green)
Measurement/connection cycle	1 s
Auto Off	After 10 minutes without Bluetooth® connection

**Technical data for Bluetooth® Connector**

Feature	Value
Storage temperature	-5 to +45 °C
Operating temperature	-5 to +45 °C
Humidity application range	15 to 90 %RH, non-condensing

Feature	Value
Operating altitude	$\leq 2,000$ m
Level of contamination	PD 2
Mains unit	5 VDC/ 6 mA
Voltage tolerance	$\pm 10\%$
Protection class	IP 40
Weight	Approx. 6.5 g
Dimensions	L: 23 mm H: 27 mm W: 18 mm

## 16.1 Contact and support

If you have any questions or need further information, please contact your dealer or Testo Customer Service. For contact details, please visit [www.testo.com/service-contact](http://www.testo.com/service-contact).



Testo SE & Co. KGaA  
Celsiusstr. 1  
D-79822 Titisee-Neustadt  
Germany  
Phone: +49 7653 681-0  
E-mail: [info@testo.de](mailto:info@testo.de)  
[www.testo.com](http://www.testo.com)